YAMAHA

PARTS CATALOGUE

T110LE (3P91) INDONESIA

1E3P9-460E1

( )

YAMAHA GENUINE Parts & Accessories

T110LE
PARTS CATALOGUE
©2006 by Yamaha Motor Co., Ltd.
1st edition, January 2006
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   “UR” Use specified parts number.
   “UN” Use as many as needed.
   “AP” Alternate Parts
   “LM” Locally Made (Parts need to be ordered locally)
   “F#” Frame No. (Applicable machine No.)
   “O/S” Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

PART NO.	DESCRIPTION	Q’TY	REMARKS
2F5–83310–60	FRONT FLASHER LIGHT ASSY	2	
115–83311–60	.BULB (6V–18W)	1	

4. Applicable colours of graphics are represented in the “REMARKS” as shown below.

PART NO.	DESCRIPTION	Q’TY	REMARKS
2N4–24110–00–X5	FUEL TANK COMP.	2	MXR
3J1–24240–10	.GRAPHIC, FUEL TANK	1	FOR MXR

5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.

7. Applicable Serial No.

Frame Serial No.

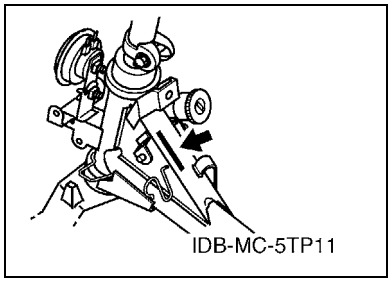

Engine Serial No.

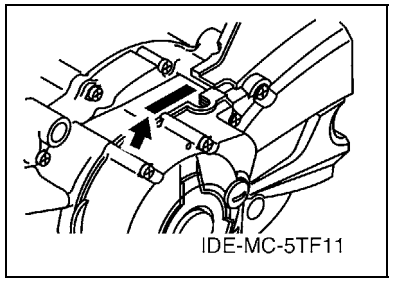

8. Applicable Colour Code (The (*) mark shows Model colour.)

Abbreviation	Colour Name	Colour Code
DPBMC(*)	DEEP PURPLISH BLUE METALLIC C	0564
VRC1(*)	VIVID RED COCKTAIL 1	0121
YB	YAMAHA BLACK	0033

9. Applicable Starting Serial No.

Frame Serial No.

Serial No.	Name Of Q'ty Column	Model Code

Engine Serial No.

Serial No.	Name Of Q'ty Column	Model Code

CONTENTS

ENGINE

CYLINDER HEAD 1
CRANKSHAFT & PISTON 2
VALVE 3
CAMSHAFT & CHAIN 4
OIL PUMP 5
INTAKE 6
CARBURETOR 7
EXHAUST 9
CRANKCASE 11
CRANKCASE COVER 1 12
STARTER 13
STARTER CLUTCH 14
CLUTCH 15
TRANSMISSION 17
SHIFT CAM & FORK 18
SHIFT SHAFT 19

CHASSIS

FRAME 20
FENDER 21
SIDE COVER 22
REAR ARM & SUSPENSION 23
STEERING 24
FRONT FORK 25
FUEL TANK 26
SEAT 27
FRONT WHEEL 28
REAR WHEEL 30
STEERING HANDLE & CABLE 32
STAND & FOOTREST 33
LEG SHIELD 35
GENERATOR 37
STARTING MOTOR 38
METER 39
HEADLIGHT 40
TAILLIGHT 41
HANDLE SWITCH & LEVER 42
ELECTRICAL 1 43
ELECTRICAL 2 44

INDEX

NUMERICAL INDEX 45

FIG. 1 CYLINDER HEAD

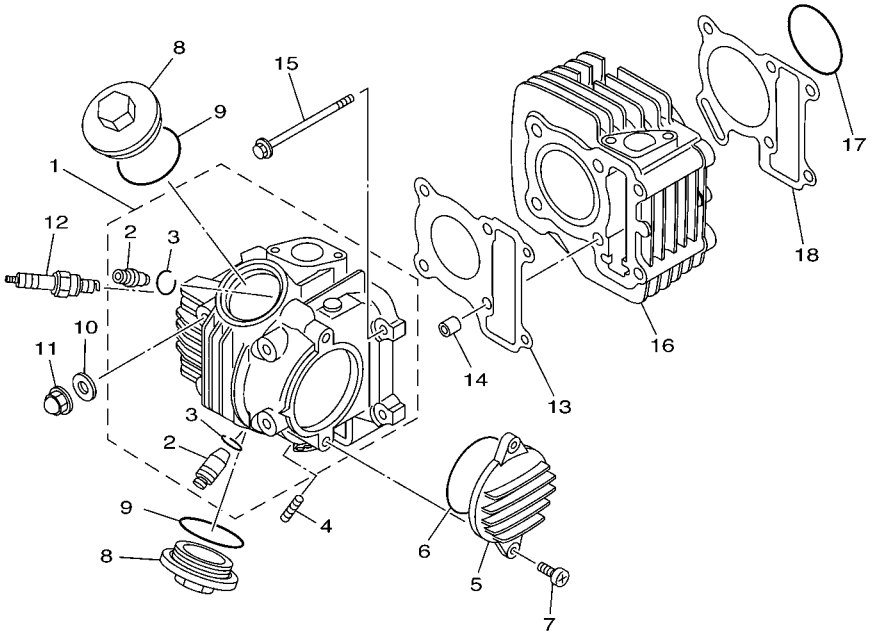

5TN1431-B011

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E1111–00	HEAD, CYLINDER 1	1					
2	4ST–11134–11	.GUIDE, VALVE 2	2					
3	93440–10153	.CIRCLIP	2					
4	90116–06804	BOLT, STUD	2					
5	4ST–E1185–00	COVER, CYLINDER HEAD SIDE 1	1					
6	93210–638G6	O-RING	1					
7	98507–06016	SCREW, PAN HEAD	2					
8	4ST–E1186–00	COVER, CYLINDER HEAD SIDE 2	2					
9	93210–448G4	O-RING	2					
10	90201–08609	WASHER, PLATE	4					
11	90176–08805	NUT, CROWN	4					
12	94700–00868	PLUG, SPARK (NGK C6HSA)	1					
13	3S0–E1181–00	GASKET, CYLINDER HEAD 1	1					
14	99530–10114	PIN, DOWEL	2					
15	95027–06090	BOLT, FLANGE	2					
16	5TP–E1310–01	CYLINDER	1					
17	93210–568G8	O-RING	1					
18	4ST–E1351–02	GASKET, CYLINDER	1					

FIG. 2 CRANKSHAFT & PISTON

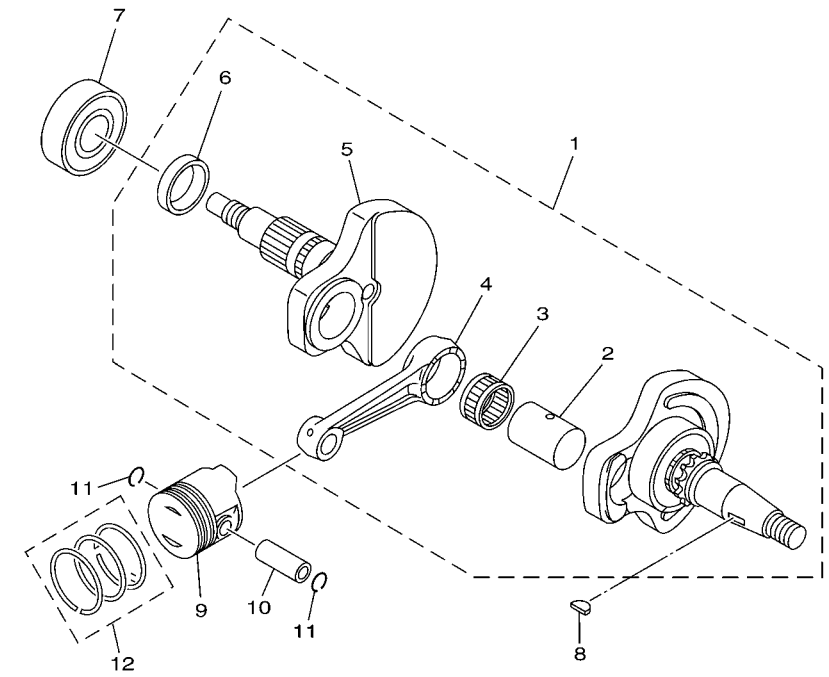

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–WE140–10	CRANKSHAFT ASSY	1					
2	5LM–E1681–00	.PIN, CRANK 1	1					
3	93310–526X0	.BEARING	1					
4	5TN–E1651–02	.ROD, CONNECTING	1					
5	5TP–E1422–00	.CRANK 2	1					
6	5ER–E1445–00	.SPACER	1					
7	93306–205YG	BEARING	1					
8	90280–03017	KEY, WOODRUFF	1					
9	3S0–E1631–00–A0	PISTON (STD)	1					
	3S0–E1636–00	PISTON (0.50MM O/S)	1					AP
	3S0–E1638–00	PISTON (1.00MM O/S)	1					AP
10	5LM–E1633–00	PIN, PISTON	1					
11	93450–14088	CIRCLIP	2					
12	5TP–E1603–20	PISTON RING SET (STD)	1					
	5TP–E1605–20	PISTON RING SET (0.50MM O/S)	1					AP
	5TP–E1607–20	PISTON RING SET (1.00MM O/S)	1					AP

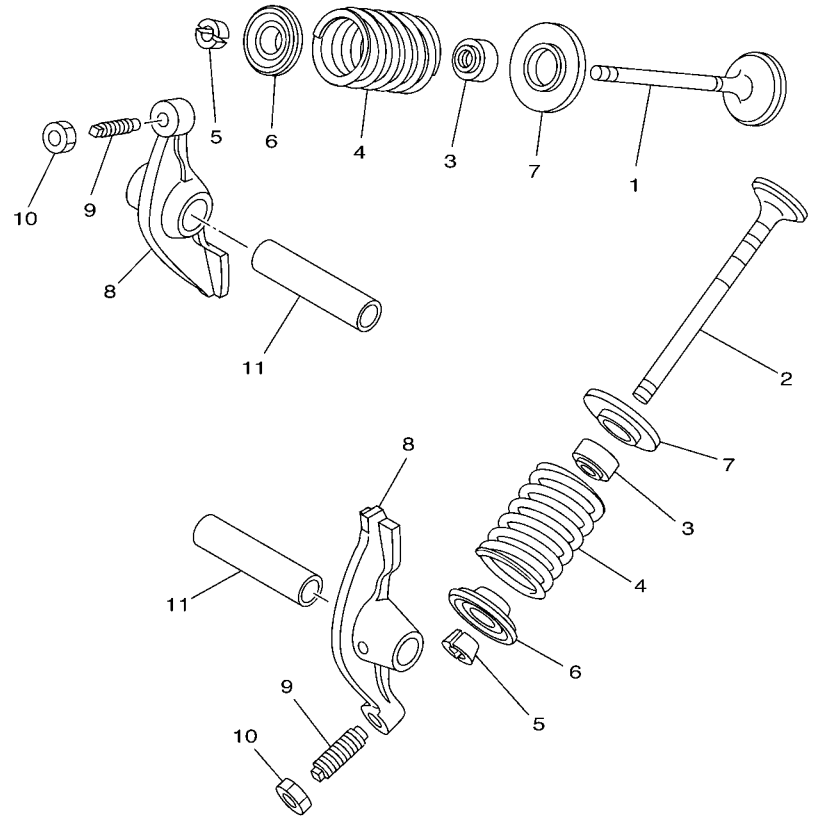

4ST1460-6030

FIG. 3 VALVE

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–E2111–00	VALVE, INTAKE	1					
2	5TP–E2121–00	VALVE, EXHAUST	1					
3	5ER–E2119–00	SEAL, VALVE STEM	2					
4	5TN–E2114–00	SPRING, VALVE OUTER	2					
5	1WG–12118–00	COTTER, VALVE	4					
6	5TN–12117–00	RETAINER, VALVE SPRING	2					
7	5TN–E2126–00	SEAT, VALVE SPRING 2	2					
8	22F–12151–10	ARM, VALVE ROCKER	2					
9	22F–12159–00	SCREW, VALVE ADJUSTING	2					
10	90170–05302	NUT	2					
11	4ST–E2156–00	SHAFT, ROCKER 2	2					

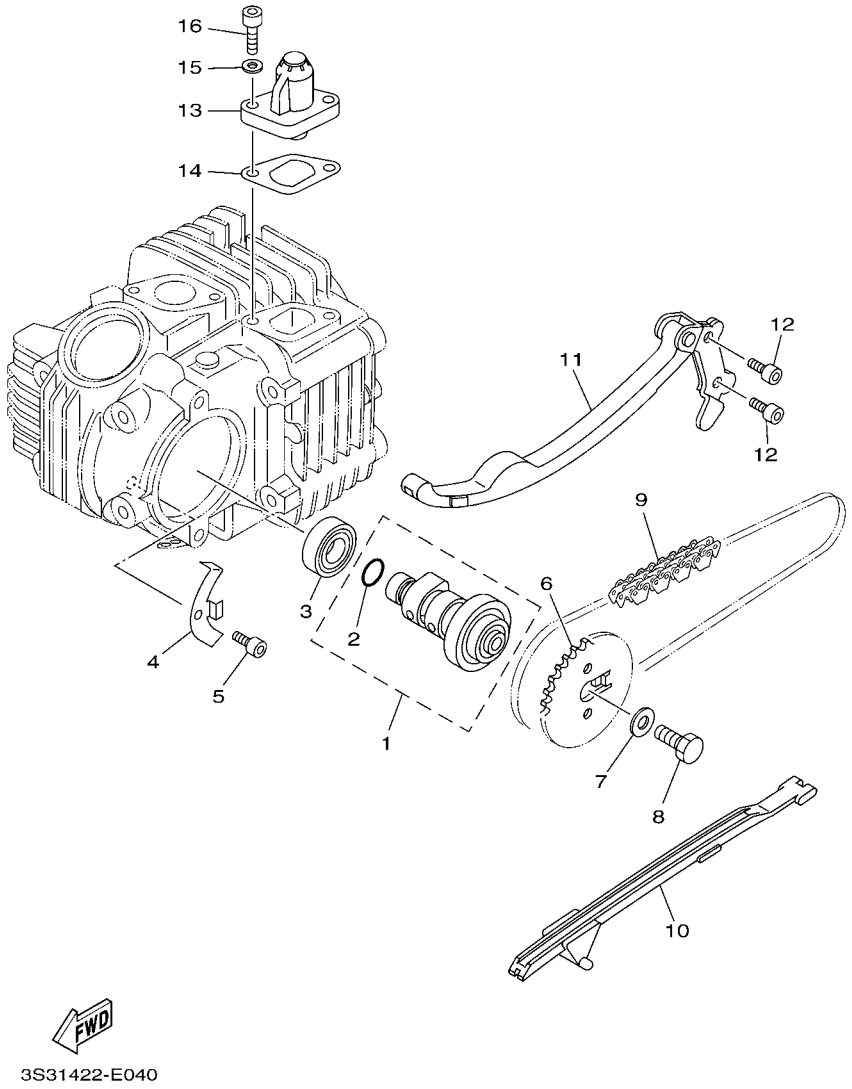

3S31422-E040

FIG. 4 CAMSHAFT & CHAIN

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–E2170–00	CAMSHAFT ASSY 1	1					
2	93210–10804	.O-RING	1					
3	93306–002X2	BEARING	1					
4	5TP–E111F–00	PLATE	1					
5	91317–06012	BOLT	1					
6	5TP–E2176–00	SPROCKET, CAM CHAIN	1					
7	90201–08326	WASHER, PLATE	1					
8	90101–08590	BOLT	1					
9	94568–A7086	CHAIN	1					
10	5TN–E2231–10	GUIDE, STOPPER 1	1					
11	5TN–E2241–10	GUIDE, STOPPER 2	1					
12	91317–06016	BOLT	2					
13	5TN–E2210–10	TENSIONER ASSY, CAM CHAIN	1					
14	3S0–E2213–00	GASKET, TENSIONER CASE	1					
15	90430–06014	GASKET	2					
16	91317–06018	BOLT	2					

FIG. 5 OIL PUMP

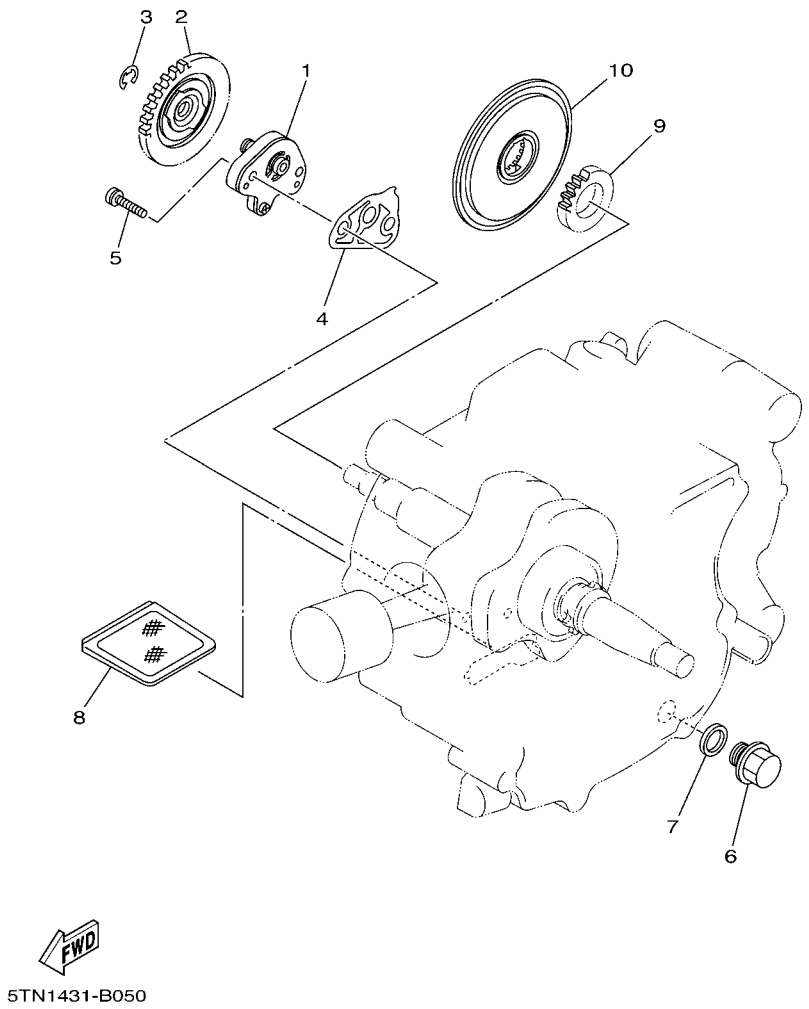

5TN1431-B050

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E3104–00	OIL PUMP SUB ASSY	1					
2	5TP–E3325–00	GEAR, PUMP DRIVEN	1					
3	99001–05600	CIRCLIP	1					
4	5TP–E3329–00	GASKET, PUMP COVER	1					
5	90155–06007	SCREW, FLAT FILLISTER	2					
6	90340–12808	PLUG, STRAIGHT SCREW	1					
7	4YS–E1198–00	GASKET	1					
8	4ST–E3411–00	STRAINER, OIL	1					
9	5TP–E3324–00	GEAR, PUMP DRIVE	1					
10	5TP–E3451–00	FILTER,ROTARY	1					

FIG. 6 INTAKE

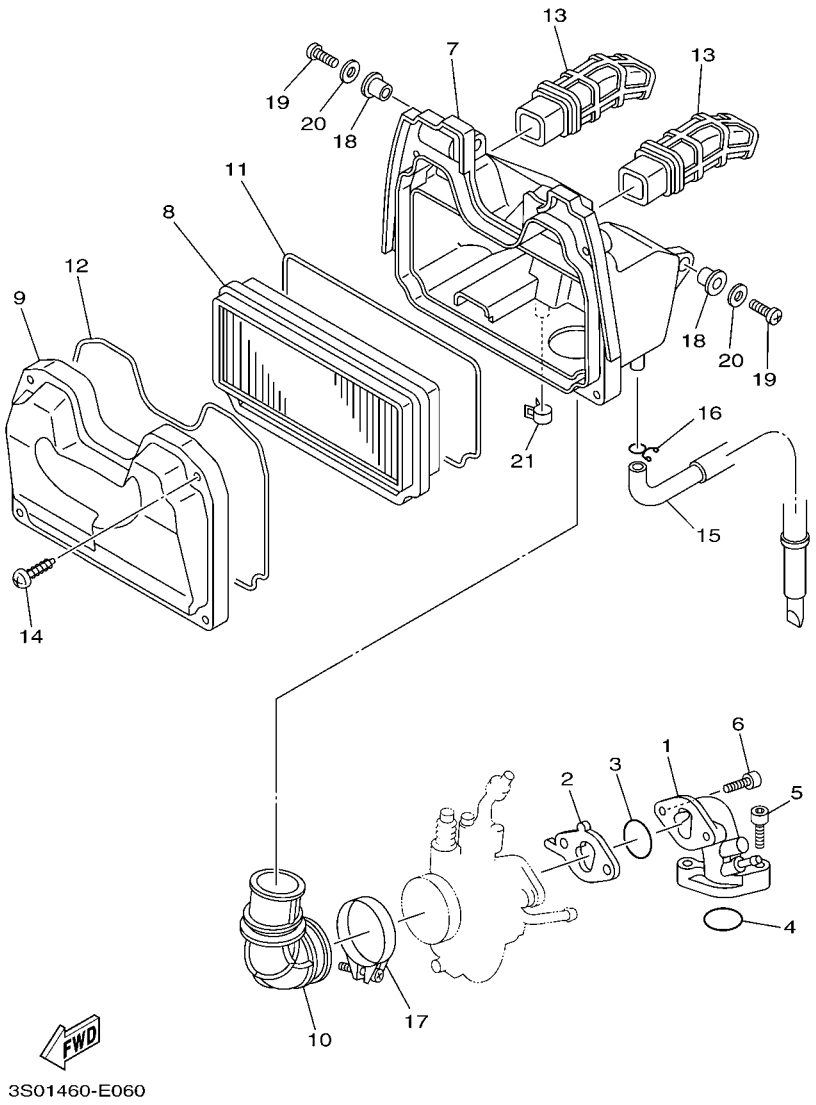

3S01460-E060

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E3586–00	JOINT, CARBURETOR 1	1					
2	5TP–E3595–00	JOINT	1					
3	93210–258G2	O-RING	1					
4	93210–258G2	O-RING	1					
5	91317–06025	BOLT	2					
6	91317–06025	BOLT	2					
7	5TP–E4411–00	CASE, AIR CLEANER 1	1					
8	5TP–E4451–00	ELEMENT, AIR CLEANER	1					
9	5TP–E4412–00	CAP, CLEANER CASE 1	1					
10	5TP–E4453–00	JOINT, AIR CLEANER 1	1					
11	5TP–E4457–00	SEAL	1					
12	5TP–E4452–00	SEAL	1					
13	5TP–E4423–00	PIPE, SUCTION 1	2					
14	9770M–50030	SCREW, TAPPING	4					
15	5TP–E443E–00	PIPE, DRAIN	1					
16	90467–12800	CLIP	1					
17	90460–43053	CLAMP, HOSE	1					
18	90387–06803	COLLAR	2					
19	98507–06020	SCREW, PAN HEAD	2					
20	92907–06600	WASHER, PLATE	2					
21	90467–13800	CLIP	1					

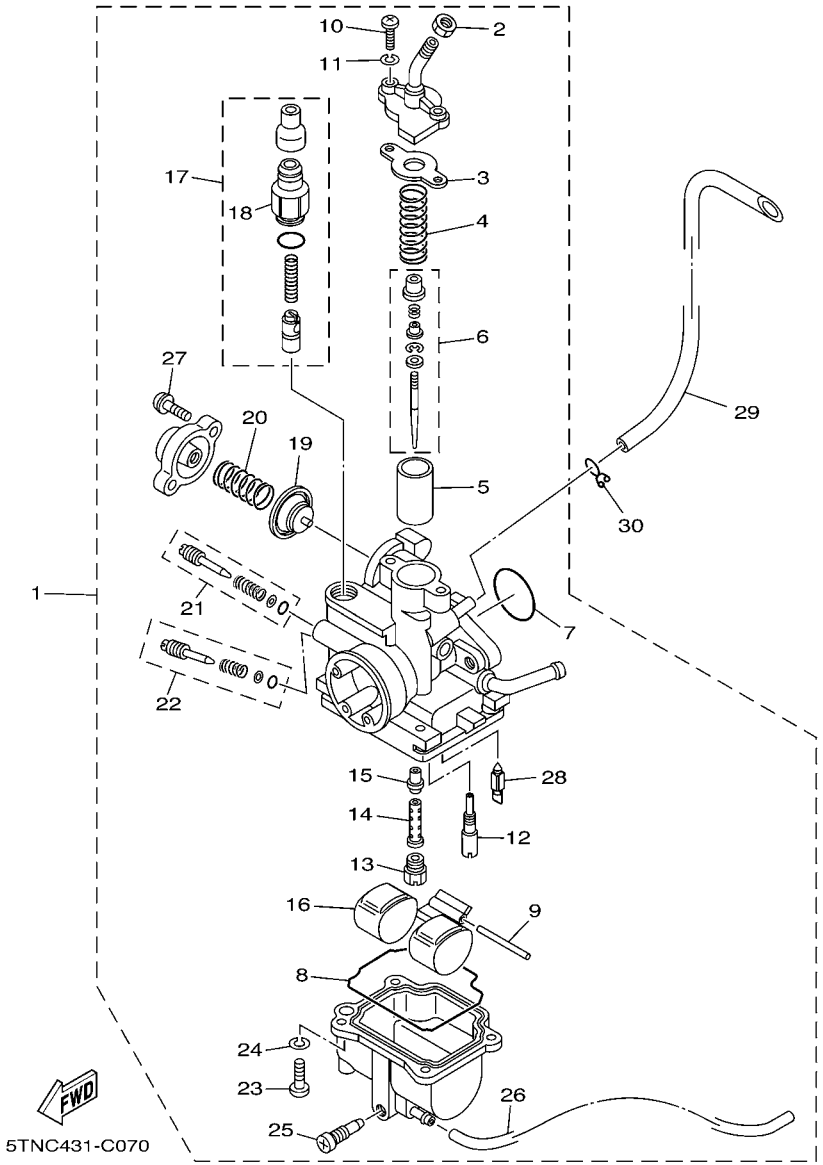

FIG. 7 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–E4101–00	CARBURETOR ASSY 1	1					
2	802–14161–00	.NUT, CABLE ADJUSTING	1					
3	4NM–14198–00	.GASKET	1					
4	5TN–14131–00	.SPRING, THROTTLE VALVE	1					
5	5TN–14112–00	.VALVE, THROTTLE 1	1					
6	5TN–1490J–00	.NEEDLE SET	1					
7	5TN–14147–00	.O-RING	1					
8	4GL–14239–00	.SEAL	1					
9	353–14186–00	.PIN, FLOAT	1					
10	98507–04012	.SCREW, PAN HEAD	2					
11	92907–04100	.WASHER, SPRING	2					
12	2MM–14142–17	.JET, PILOT (# 17.5)	1					
13	18A–14143–21	.JET, MAIN (#105)	1					
14	5TN–14148–00	.PIPE	1					
15	5TN–14141–18	.NOZZLE, MAIN	1					
16	5DV–14985–00	.FLOAT	1					
17	5WT–1410A–00	.STARTER SET	1					
18	3RW–14174–00	..CAP, PLUNGER	1					
19	5TN–14940–00	.DIAPHRAGM ASSY	1					
20	5TN–24423–00	.SPRING, DIAPHRAGM	1					
21	4GL–14104–00	.AIR SCREW SET	1					
22	5TN–14103–00	.THROTTLE SCREW SET	1					
23	98507–04014	.SCREW, PAN HEAD	4					
24	92907–04100	.WASHER, SPRING	4					
25	5LW–14191–00	.PLUG, DRAIN	1					
26	32N–14196–00	.PIPE	1					
27	5TN–14216–00	.SCREW	2					

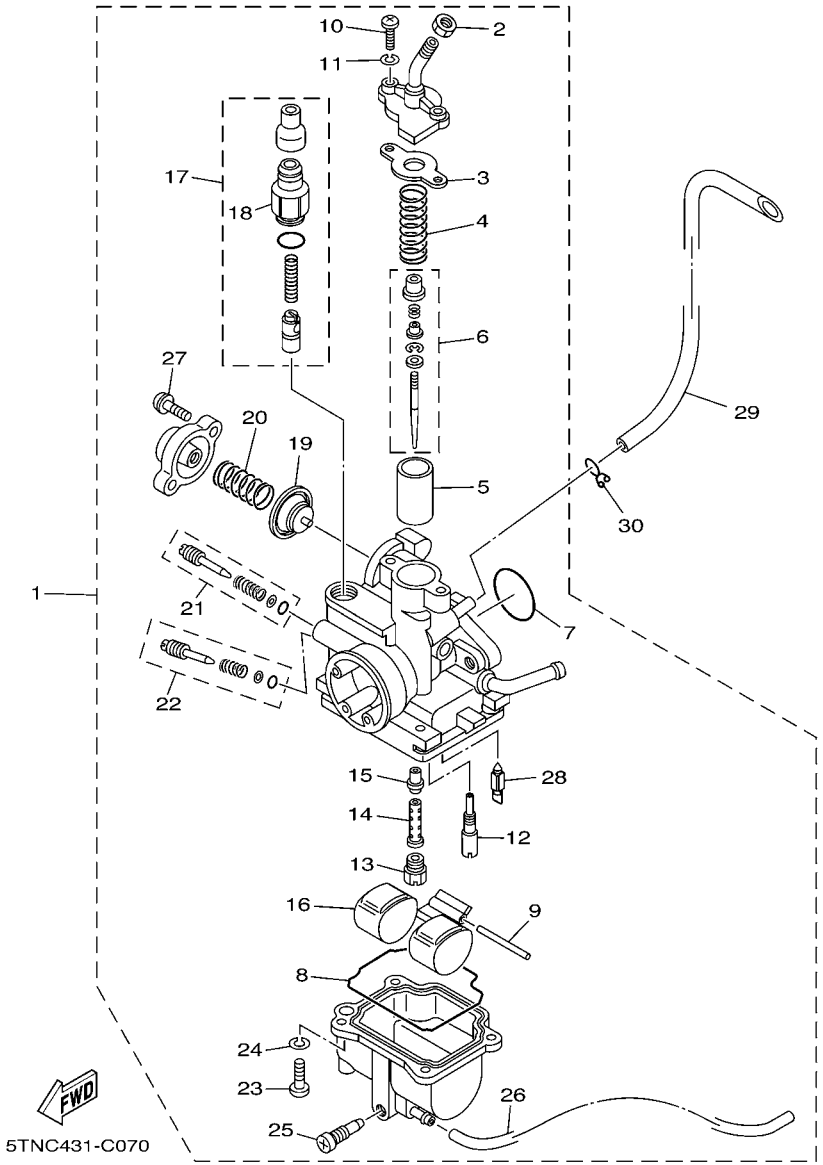

FIG. 7 CARBURETOR

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
28	5TN–14150–10	.NEEDLE ASSY	1					
29	5TP–E4197–10	PIPE	1					
30	90467–07029	CLIP	1					

FIG. 8 EXHAUST

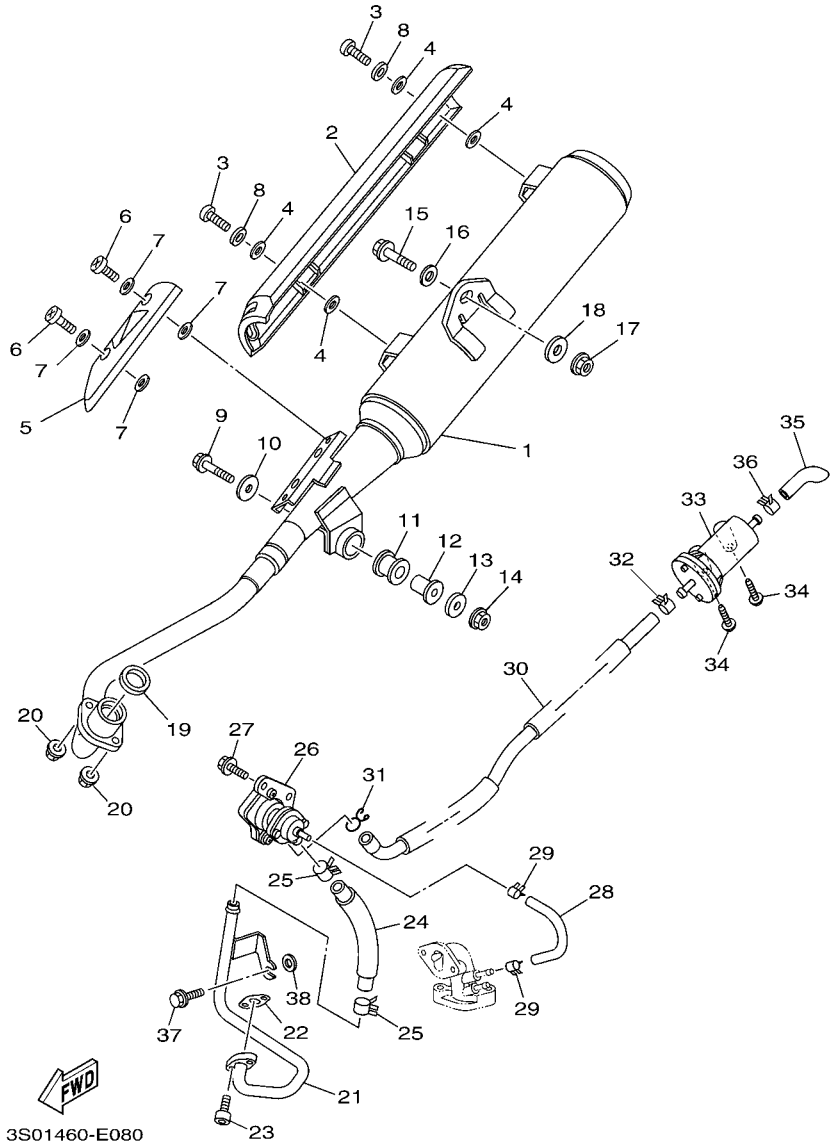

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E4711–00	MUFFLER 1	1					
2	3S0–E4718–00	PROTECTOR, MUFFLER 1	1					
3	98980–06012	SCREW, BIND	2					
4	5TP–E4766–00	WASHER, PROTECTOR	4					
5	3S0–E4728–00	PROTECTOR, MUFFLER 2	1					
6	98980–06012	SCREW, BIND	2					
7	5LM–E4766–00	WASHER, PROTECTOR	4					
8	90201–06557	WASHER, PLATE	2					
9	95807–08040	BOLT, FLANGE	1					
10	90201–08612	WASHER, PLATE	1					
11	5TP–F7424–00	DAMPER, FOOTREST 2	1					
12	90387–10810	COLLAR	1					
13	90201–083A8	WASHER, PLATE	1					
14	95707–08500	NUT, FLANGE	1					
15	95827–10045	BOLT, FLANGE	1					
16	92907–10200	WASHER, PLAIN	1					
17	95707–10500	NUT, FLANGE	1					
18	90201–10669	WASHER, PLATE	1					
19	5TP–E4613–00	GASKET, EXHAUST PIPE	1					
20	95707–06500	NUT, FLANGE	2					
21	5TN–E4871–00	PIPE 1	1					
22	3S0–E4815–00	GASKET	1					
23	91317–06016	BOLT	2					
24	3S0–E4881–00	HOSE, BEND 1	1					
25	90467–16800	CLIP	2					
26	3S0–E4803–01	AIR INDUCTION SYSTEM ASSY	1					
27	95807–06012	BOLT, FLANGE	2					

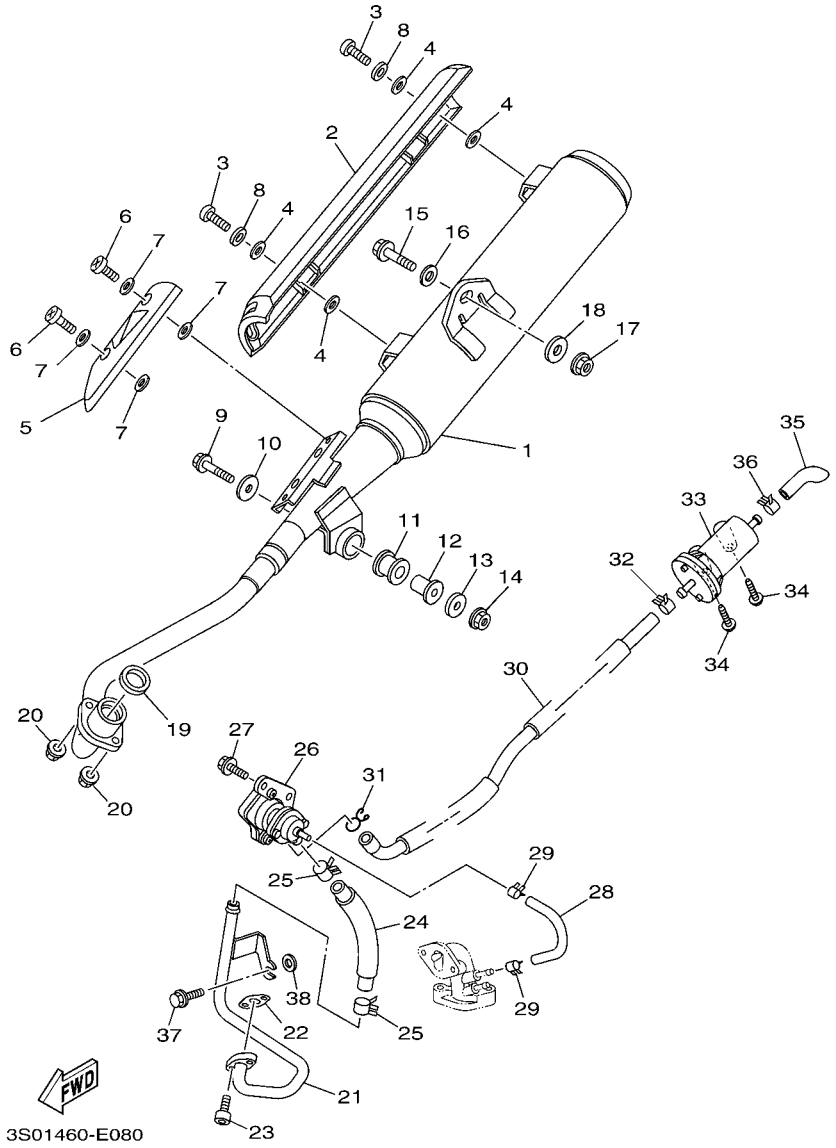

FIG. 8 EXHAUST

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
28	3S0–E3542–00	HOSE, VACUUM SENSING 1	1					
29	90467–08801	CLIP	2					
30	3S0–E4882–00	HOSE, BEND 2	1					
31	90467–15012	CLIP	1					
32	90467–13809	CLIP	1					
33	3S0–E4806–00	AIR FILTER	1					
34	97707–50016	SCREW, TRUSS HEAD TAPPING	2					
35	3S0–E4883–00	HOSE, BEND 3	1					
36	90467–13809	CLIP	1					
37	95827–08016	BOLT, FLANGE	1					
38	92907–08200	WASHER	1					

FIG. 9 CRANKCASE

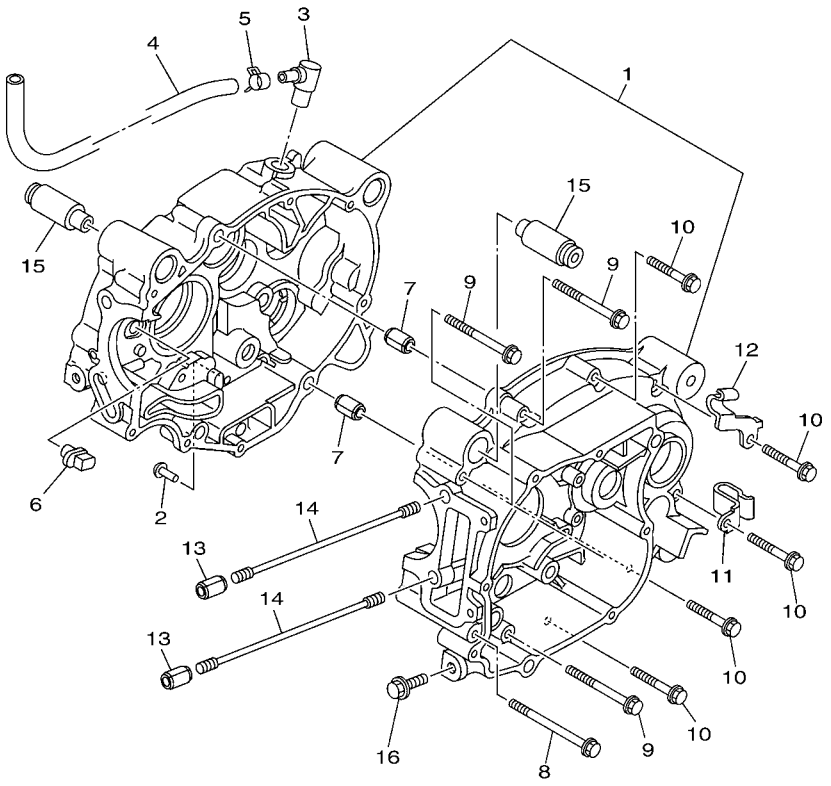

3S01460-E090

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E5150–00	CRANKCASE ASSY	1					
2	5HV–E6346–00	HOOK, SPRING	1					
3	4ST–E5371–00	BREATHER	1					
4	5TP–E1166–00	PIPE, BREATHER 1	1					
5	90467–13808	CLIP	1					
6	5TP–E5155–00	NOZZLE 3	1					
7	99530–10114	PIN, DOWEL	2					
8	9502L–06080	BOLT, FLANGE	1					
9	9502L–06060	BOLT, FLANGE	3					
10	9502L–06040	BOLT, FLANGE	5					
11	90465–10833	CLAMP	1					
12	90462–10801	CLAMP	1					
13	99530–10114	PIN, DOWEL	2					
14	90116–08807	BOLT, STUD	4					
15	5TP–E5316–00	DAMPER, ENGINE MOUNT 1	2					
16	95827–08016	BOLT, FLANGE	1					

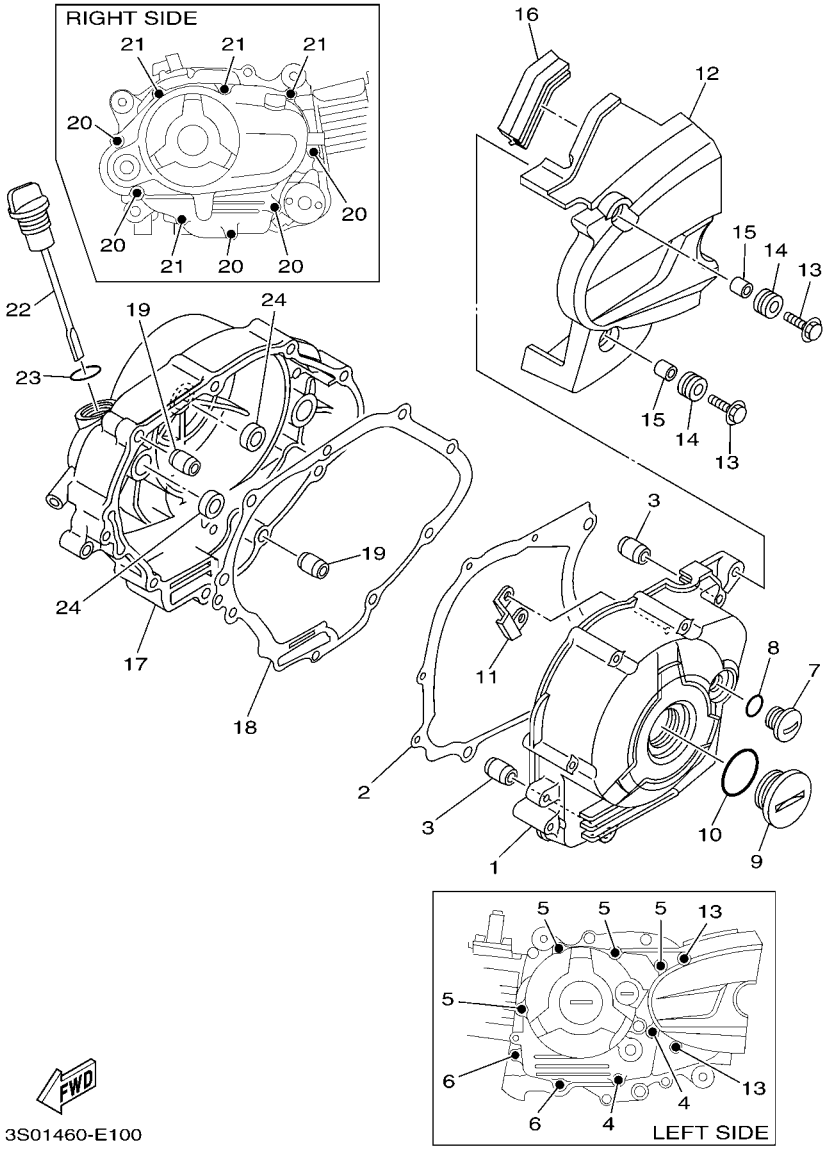

FIG. 10 CRANKCASE COVER 1

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E5411–00	COVER, CRANKCASE 1	1					
2	4ST–E5451–01	GASKET, CRANKCASE COVER 1	1					
3	99530–10114	PIN, DOWEL	2					
4	9502L–06040	BOLT, FLANGE	2					
5	9502L–06050	BOLT, FLANGE	4					
6	9502L–06080	BOLT, FLANGE	2					
7	90340–14806	PLUG, STRAIGHT SCREW	1					
8	93210–148F8	O-RING	1					
9	90340–32805	PLUG, STRAIGHT SCREW	1					
10	93210–328G3	O-RING	1					
11	5TP–E5113–00	PLATE	1					
12	3S0–E5418–00	COVER, CHAIN CASE	1					
13	95807–06025	BOLT, FLANGE	2					
14	90480–13568	GROMMET	2					
15	90387–06844	COLLAR	2					
16	5TP–E5492–10	COVER	1					
17	3S0–E5421–00	COVER, CRANKCASE 2	1					
18	4ST–E5461–11	GASKET, CRANKCASE COVER 2	1					
19	99530–10114	PIN, DOWEL	2					
20	9502L–06040	BOLT, FLANGE	5					
21	9502L–06050	BOLT, FLANGE	4					
22	5TP–E5362–00	PLUG, OIL LEVEL	1					
23	93210–198F9	O-RING	1					
24	93101–10843	OIL SEAL	2					

FIG. 11 STARTER

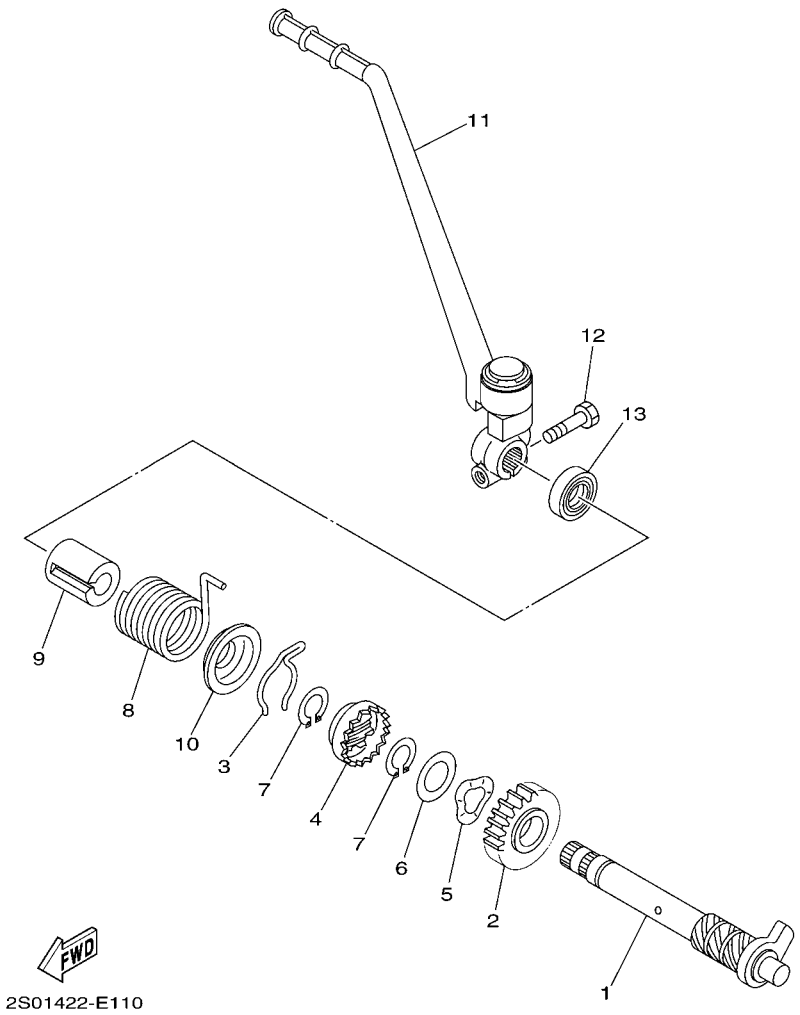

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–E5660–00	KICK AXLE ASSY	1					
2	5LM–E5641–00	GEAR, KICK	1					
3	90468–23194	CLIP	1					
4	4WH–E5671–00	WHEEL, RATCHET	1					
5	90206–19027	WASHER, WAVE	1					
6	4WH–E5644–00	SHIM	1					
7	99009–19400	CIRCLIP	2					
8	90508–26016	SPRING, TORSION	1					
9	3S0–E5664–00	GUIDE, SPRING	1					
10	5LM–E5664–00	GUIDE, SPRING	1					
11	5LM–E5620–00	KICK CRANK ASSY	1					
12	97017–06025	BOLT	1					
13	93102–15890	OIL SEAL	1					

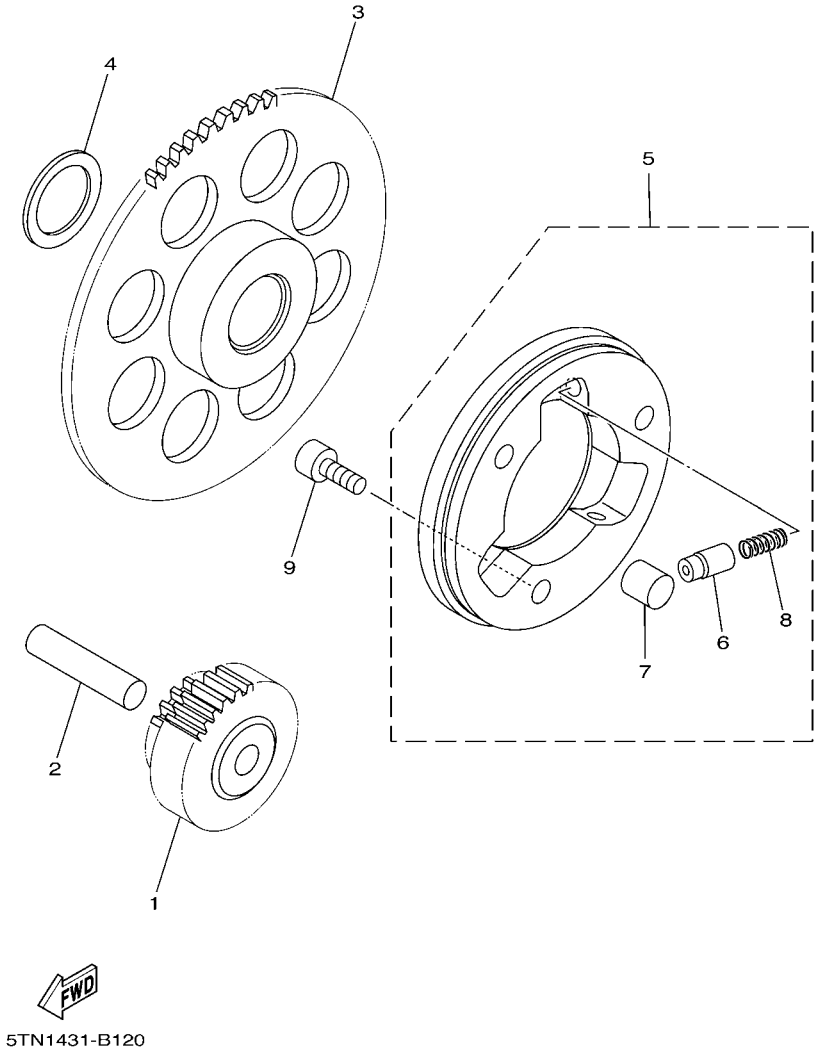

5TN1431-B120

FIG. 12 STARTER CLUTCH

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TN–E5512–00	GEAR, IDLER 1	1					
2	93608–43157	PIN, DOWEL	1					
3	5TP–E5524–00	WHEEL, STARTER	1					
4	4WH–E5644–00	SHIM	1					
5	5HV–E5580–00	STARTER CLUTCH OUTER ASSY	1					
6	5HV–E5583–00	.CAP, STARTER CLUTCH SPRING	3					
7	93610–10174	.PIN, DOWEL	3					
8	90501–02639	.SPRING, COMPRESSION	3					
9	91317–06012	BOLT	3					

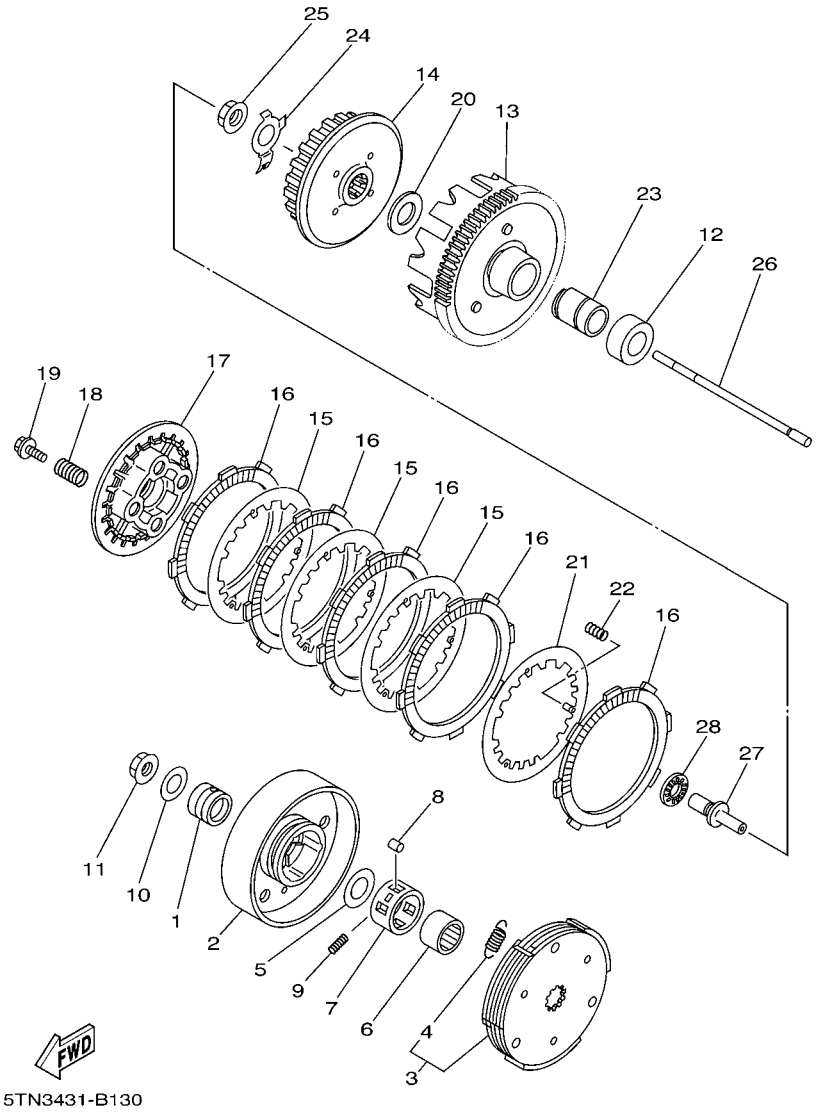

FIG. 13 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	90387–16803	COLLAR	1					
2	5TP–E6611–00	CLUTCH HOUSING COMP.	1					
3	5TP–E6620–00	CLUTCH CARRIER ASSY	1					
4	5TP–E6626–00	.SPRING, CLUTCH WEIGHT 1	1					
5	90201–167P7	WASHER, PLATE	1					
6	5LM–E6512–00	BOSS, CLUTCH HOUSING	1					
7	5TP–E6586–00	CAGE	1					
8	93606–10800	PIN, DOWEL	3					
9	90501–04800	SPRING, COMPRESSION	1					
10	90201–12019	WASHER, PLATE	1					
11	90179–12802	NUT	1					
12	90560–17384	SPACER	1					
13	5TP–E6150–00	PRIMARY DRIVEN GEAR COMP.	1					
14	5TP–E6371–00	BOSS, CLUTCH	1					
15	5TP–E6324–00	PLATE, CLUTCH 1	3					
16	5TN–E6321–00	PLATE, FRICTION	5					
17	5TP–E6351–00	PLATE, PRESSURE 1	1					
18	90501–203G2	SPRING, COMPRESSION	4					
19	90119–05827	BOLT, WITH WASHER	4					
20	90201–178J5	WASHER, PLATE	1					
21	5TP–E6350–00	PRESSURE PLATE ASSY	1					
22	90501–050F1	SPRING, COMPRESSION	3					
23	90387–17004	COLLAR	1					
24	5TP–E6135–00	WASHER, LOCK	1					
25	90179–14001	NUT	1					
26	5LM–E6357–00	ROD, PUSH 2	1					
27	5LM–E6356–01	ROD, PUSH 1	1					

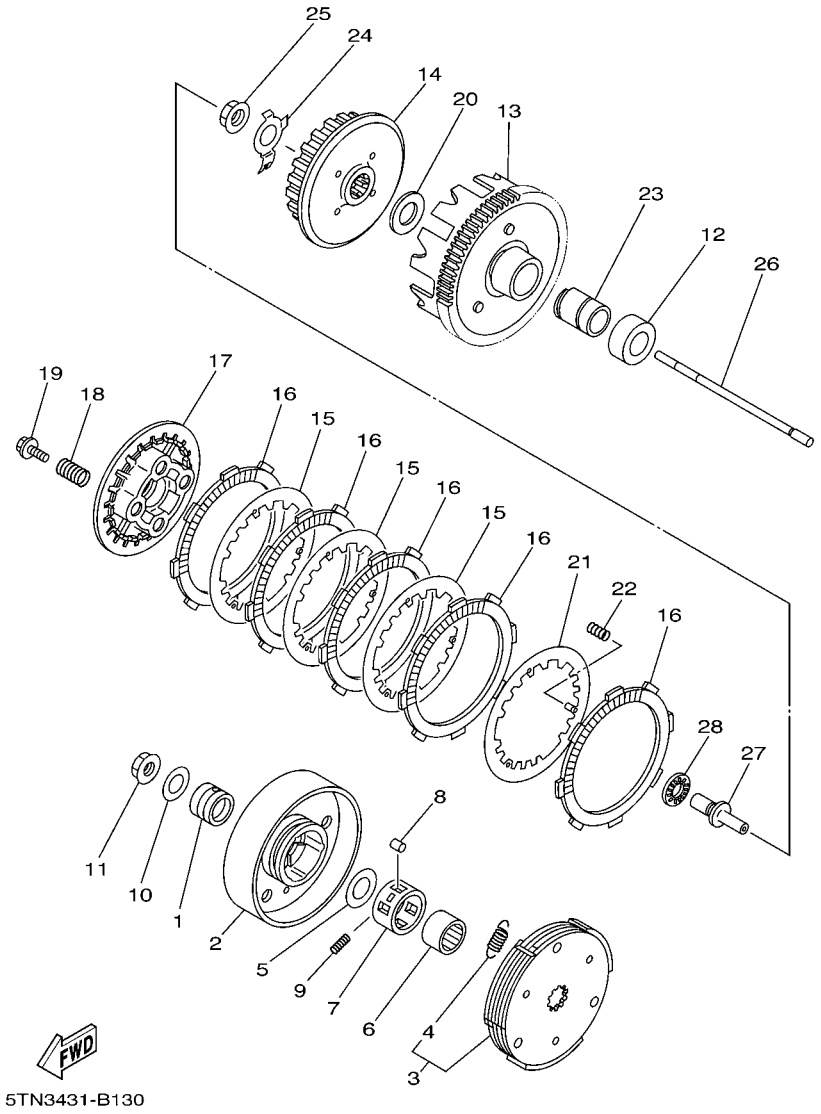

5TN3431-B130

FIG. 13 CLUTCH

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
28	93340–210Y0	BEARING	1					

FIG. 14 TRANSMISSION

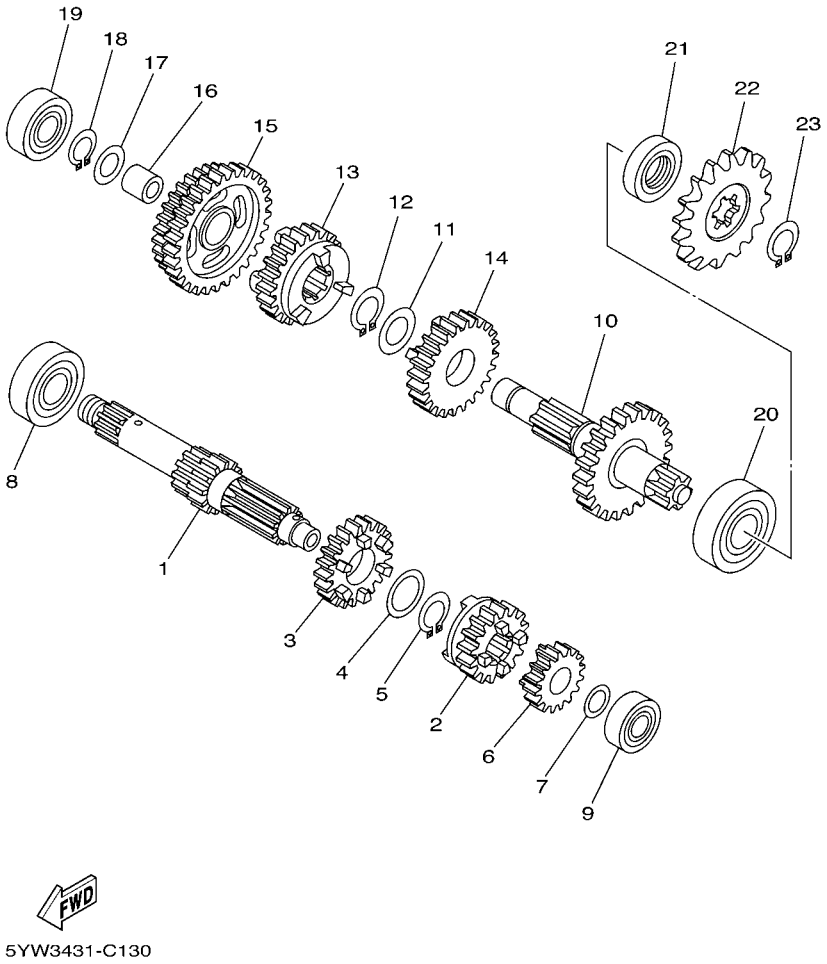

5YW3431-C130

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	4ST–E7411–00	AXLE, MAIN (12T)	1					
2	5TP–E7131–00	GEAR, 3RD PINION (21T)	1					
3	5TP–E7141–00	GEAR, 4TH PINION (21T)	1					
4	90201–20266	WASHER, PLATE (T=1.0)	1					
5	93410–20038	CIRCLIP	1					
6	5TP–E7121–00	GEAR, 2ND PINION (17T)	1					
7	90201–12166	WASHER, PLATE	1					
8	93306–203YR	BEARING	1					
9	93306–001Y7	BEARING	1					
10	5TP–E7402–00	DRIVE AXLE ASSY (33T)	1					
11	90201–20266	WASHER, PLATE (T=1.0)	1					
12	93410–20038	CIRCLIP	1					
13	5TP–E7241–00	GEAR, 4TH WHEEL (23T)	1					
14	5TP–E7231–00	GEAR, 3RD WHEEL (29T)	1					
15	5TP–E7211–00	GEAR, 1ST WHEEL (30T/38T)	1					
16	90387–1503D	COLLAR	1					
17	90201–15700	WASHER, PLATE	1					
18	99009–15400	CIRCLIP	1					
19	93306–202YW	BEARING	1					
20	93306–204YC	BEARING	1					
21	93102–20892	OIL SEAL	1					
22	93822–15069	SPROCKET,DRIVE (15T)	1					
23	93410–20038	CIRCLIP	1					

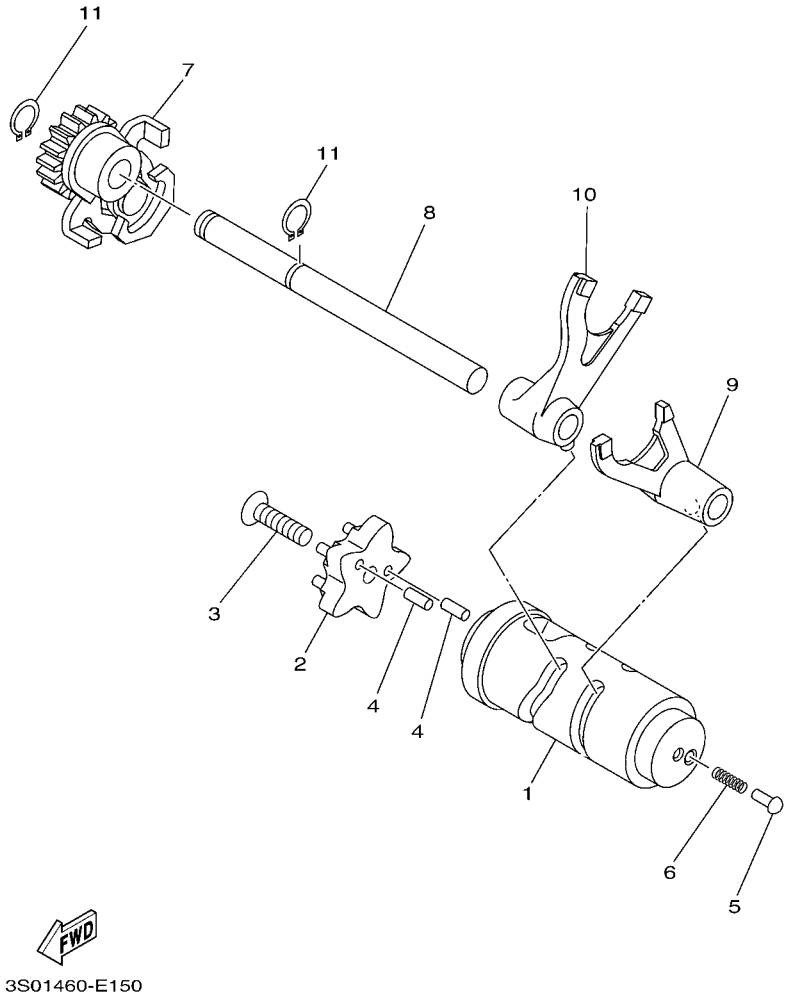

3S01460-E150

FIG. 15 SHIFT CAM & FORK

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–E8540–00	SHIFT CAM ASSY	1					
2	5TN–E8185–10	SEGMENT	1					
3	92B17–06025	BOLT	1					
4	93604–12831	PIN, DOWEL	2					
5	4BA–18542–00	POINT, NEUTRAL	1					
6	90501–06022	SPRING, COMPRESSION	1					
7	5ER–E8120–20	SHIFT LEVER ASSY	1					
8	3S0–E8531–00	BAR, SHIFT FORK GUIDE 1	1					
9	3S0–E8511–00	FORK, SHIFT 1	1					
10	5LM–E8512–00	FORK, SHIFT 2	1					
11	99009–10400	CIRCLIP	2					

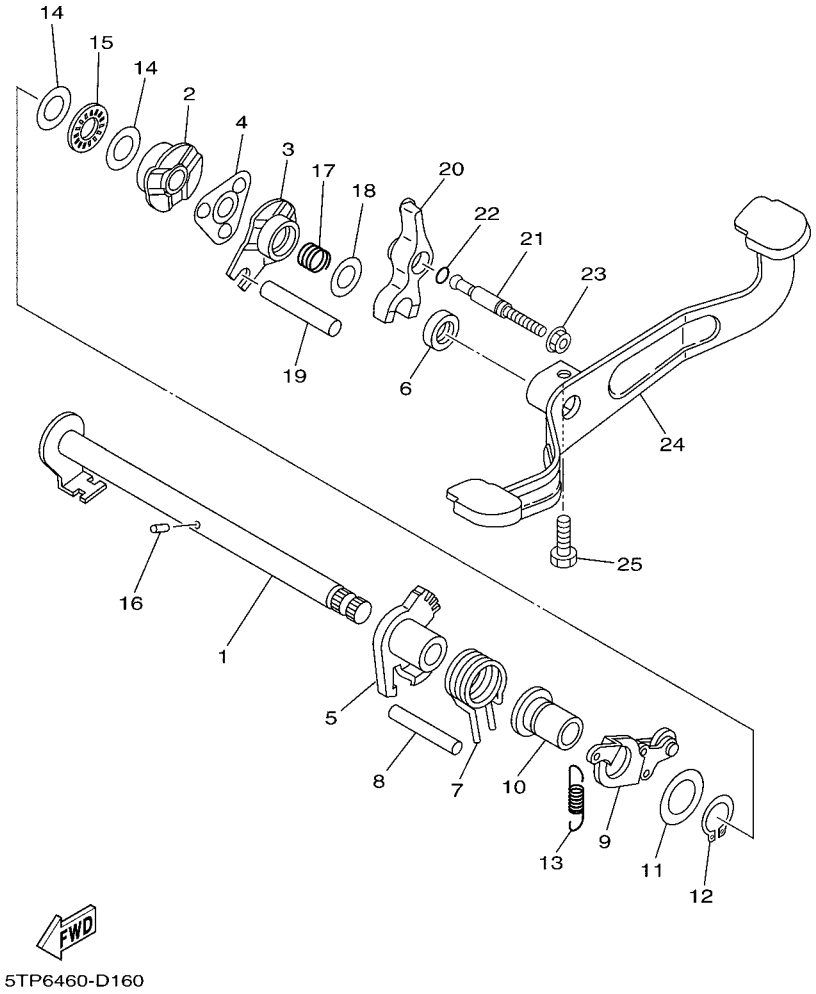

5TP6460-D160

FIG. 16 SHIFT SHAFT

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–E8101–00	SHIFT SHAFT ASSY	1					
2	5TP–E8179–00	GUIDE	1					
3	5TP–E8172–00	GUIDE, SHIFT	1					
4	5TP–E8181–00	HOLDER, PAWL	1					
5	5TP–E8152–10	LEVER, SHIFT 4	1					
6	93102–12891	OIL SEAL	1					
7	90508–29007	SPRING, TORSION	1					
8	93608–50149	PIN, DOWEL	1					
9	5TP–E8140–00	STOPPER LEVER ASSY	1					
10	5TP–E8699–00	BOSS 1	1					
11	90201–178D3	WASHER, PLATE	1					
12	99009–17400	CIRCLIP	1					
13	5TP–E8337–00	SPRING	1					
14	90201–127F4	WASHER, PLATE	2					
15	93340–212Y2	BEARING	1					
16	93604–10011	PIN, DOWEL	1					
17	90501–125E9	SPRING, COMPRESSION	1					
18	90201–126A7	WASHER, PLATE	1					
19	5LM–E8173–00	PIN, SHIFT	1					
20	5WT–E817A–00	ARM, SHIFT 3	1					
21	4YS–E8186–00	SCREW, ADJUSTING	1					
22	93210–068F7	O-RING	1					
23	95707–06500	NUT, FLANGE	1					
24	5TP–E8111–10	PEDAL, SHIFT	1					
25	97027–06020	BOLT	1					

FIG. 17 FRAME

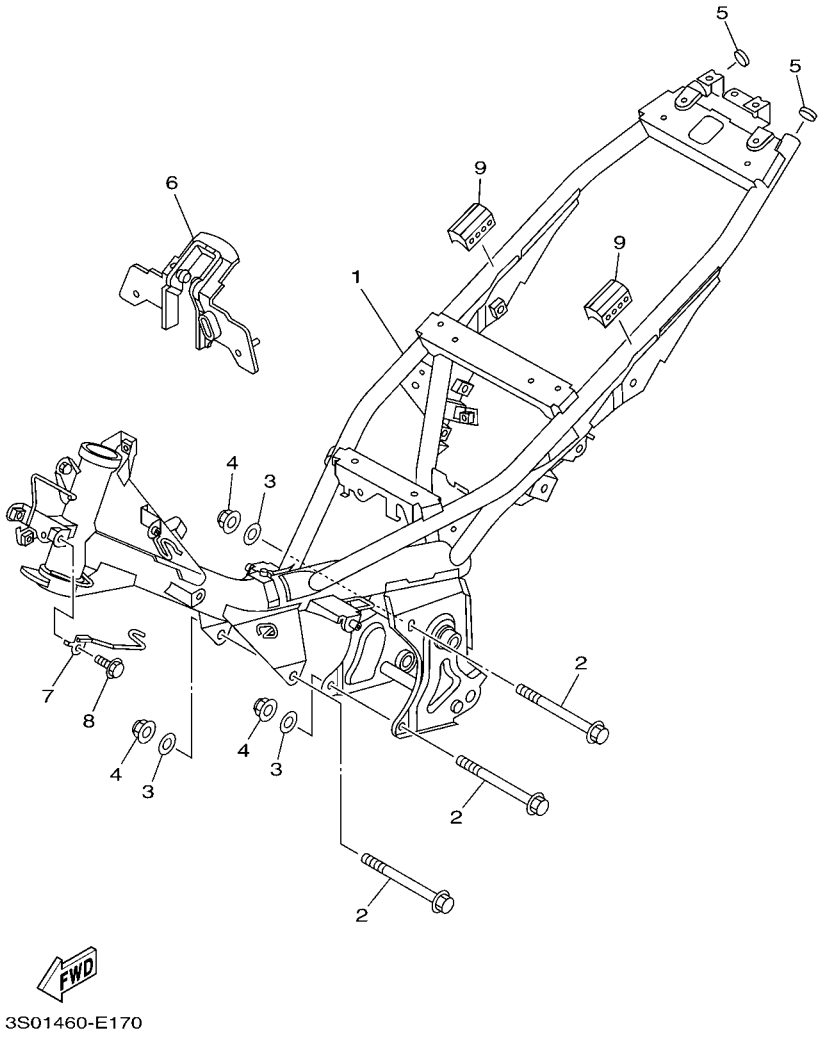

3S01460-E170

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F1110–00	FRAME COMP.	1					
2	95817–08120	BOLT, FLANGE	3					
3	90201–086P8	WASHER, PLATE	3					
4	95607–08200	NUT, SELF-LOCKING	3					
5	5TP–F139R–00	COVER 2	2					
6	5TP–F117R–00	COVER 4	1					
7	3P9–F1679–00	HOLDER, HARNESS	1					
8	95807–06010	BOLT, FLANGE	1					
9	3S0–F139U–00	DAMPER 2	2					

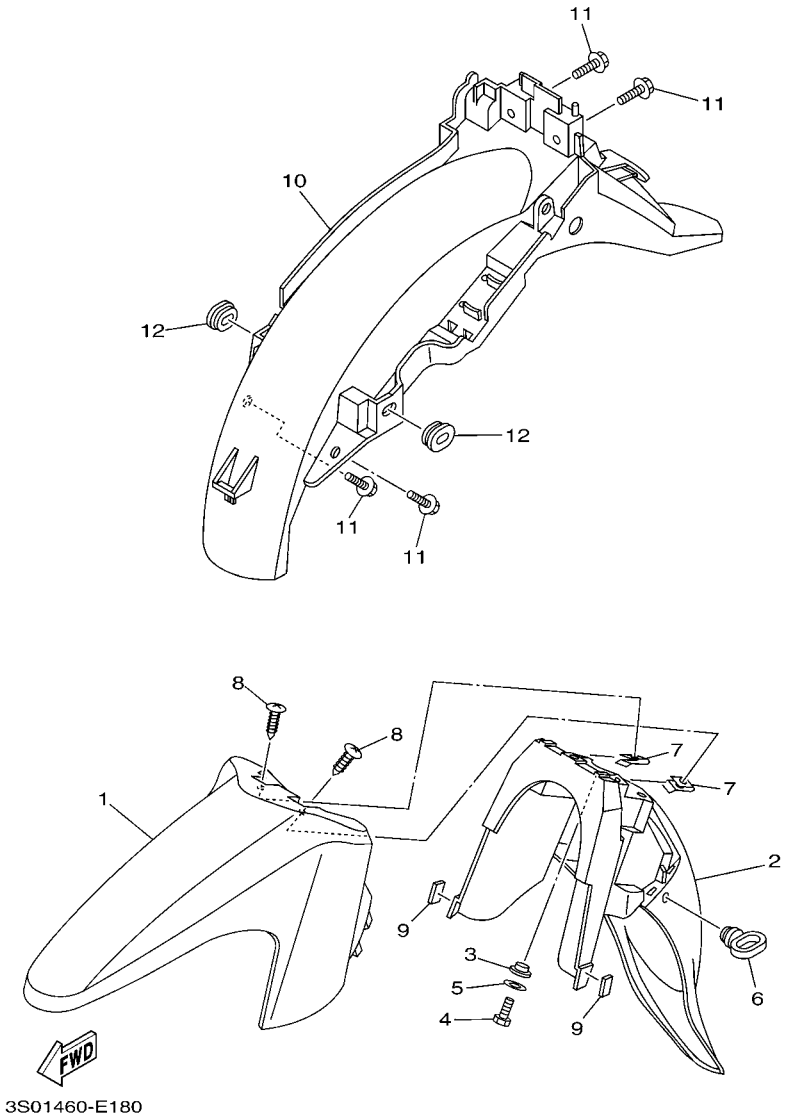

3S01460-E180

FIG. 18 FENDER

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F1511–00–P1	FENDER, FRONT	1					UR VRC1
	3S0–F1511–00–P0	FENDER, FRONT	1					UR DPBMC
2	3S0–F1556–00	FENDER, FRONT 2	1					
3	90387–06681	COLLAR	3					
4	97027–06020	BOLT	3					
5	92907–06600	WASHER, PLATE	3					
6	4ST–F1518–00	HOLDER, CABLE	1					
7	90183–05807	NUT, SPRING	2					
8	97707–50014	SCREW, TRUSS HEAD TAPPING	2					
9	5LM–F8371–00	DAMPER	2					
10	3S0–F1611–00	FENDER, REAR	1					
11	90119–06044	BOLT, WITH WASHER	4					
12	90480–01559	GROMMET	2					

FIG. 19 SIDE COVER

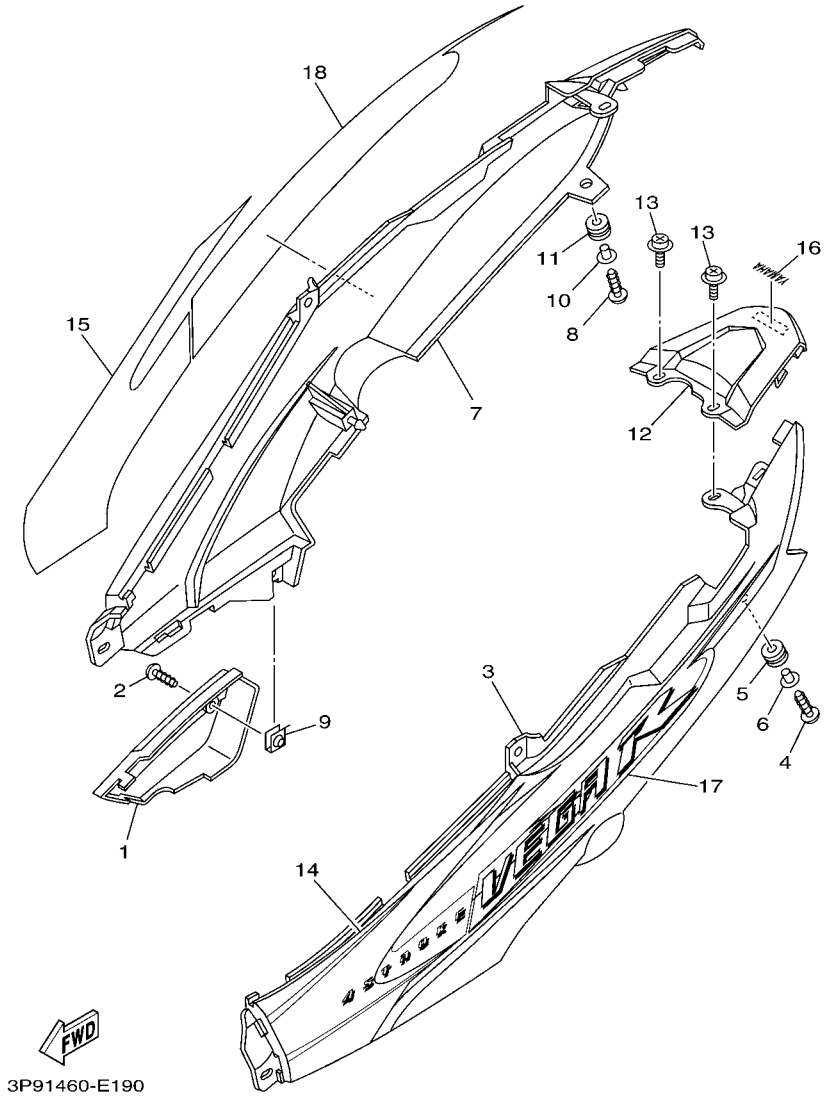

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F1721–00	COVER, SIDE 2	1					
2	97707–50014	SCREW, TRUSS HEAD TAPPING	1					
3	3S0–F1731–00–33	COVER, SIDE 3	1					YB
4	97707–50020	SCREW, TAPPING	1					
5	90480–12808	GROMMET	1					
6	90387–06899	COLLAR	1					
7	3S0–F1741–00–33	COVER, SIDE 4	1					YB
8	97707–50020	SCREW, TAPPING	1					
9	90183–05807	NUT, SPRING	1					
10	90480–12808	GROMMET	1					
11	90387–06899	COLLAR	1					
12	3S0–F171E–00–33	COVER, SIDE 5	1					YB
13	90159–06817	SCREW, WITH WASHER	2					
14	3P9–F173E–00	GRAPHIC 1	1					UR FOR VRC1
	3P9–F173E–10	GRAPHIC 1	1					UR FOR DPBMC
15	3P9–F173F–00	GRAPHIC 2	1					UR FOR VRC1
	3P9–F173F–10	GRAPHIC 2	1					UR FOR DPBMC
16	3S0–F153E–30	EMBLEM, YAMAHA	1					
17	3P9–F174J–00	GRAPHIC 5	1					UR FOR VRC1
	3P9–F174J–10	GRAPHIC 5	1					UR FOR DPBMC
18	3P9–F174K–00	GRAPHIC 6	1					UR FOR VRC1
	3P9–F174K–10	GRAPHIC 6	1					UR FOR DPBMC

FIG. 20 REAR ARM & SUSPENSION

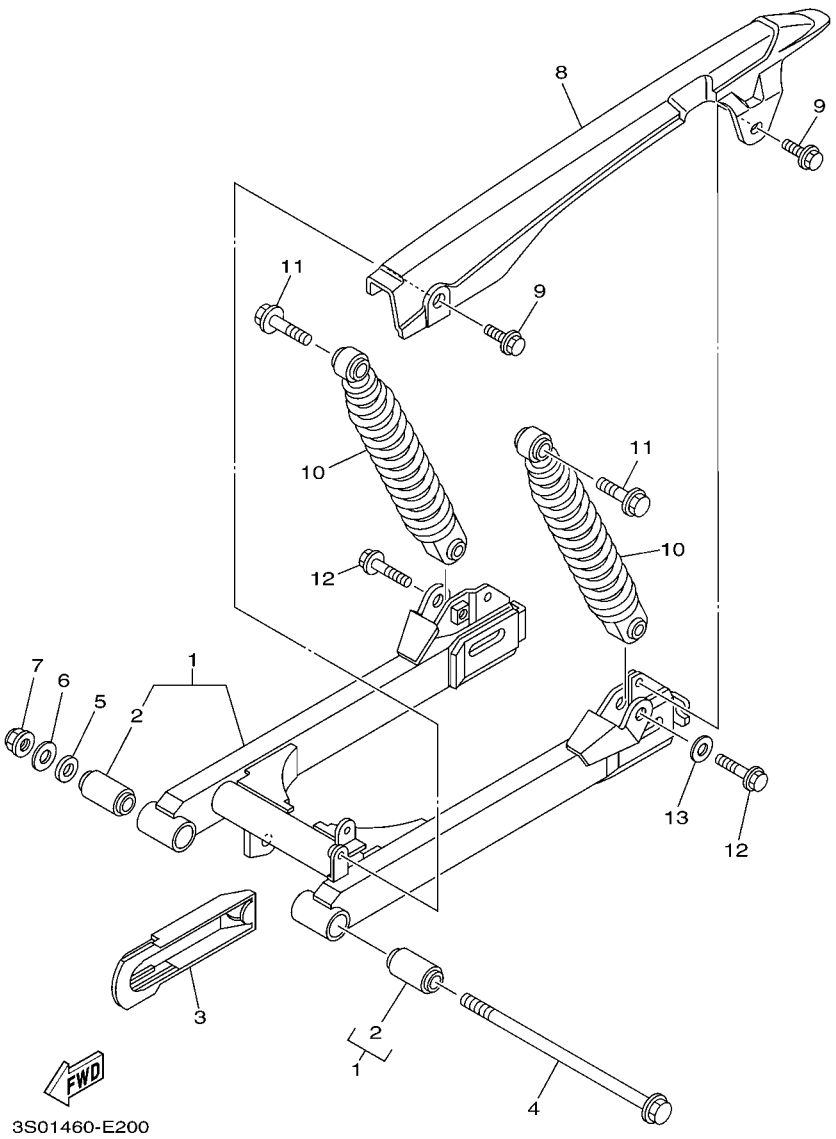

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F2100–00–33	REAR ARM ASSY	1					YB
2	3HB–F2123–00	.BUSH 1	2					
3	5TP–F2151–00	SEAL, GUARD	1					
4	5LM–F2141–00	SHAFT, PIVOT	1					
5	90201–122F8	WASHER, PLATE	1					
6	90201–12190	WASHER, PLATE	1					
7	95604–12200	NUT, SELF-LOCKING	1					
8	3S0–F2311–00	CASE, CHAIN	1					
9	90119–06117	BOLT, WITH WASHER	2					
10	3S0–F2210–01	SHOCK ABSORBER ASSY, REAR	2					
11	90105–12018	BOLT, FLANGE	2					
12	90105–10778	BOLT, FLANGE	2					
13	90201–101J1	WASHER, PLATE	1					

FIG. 21 STEERING

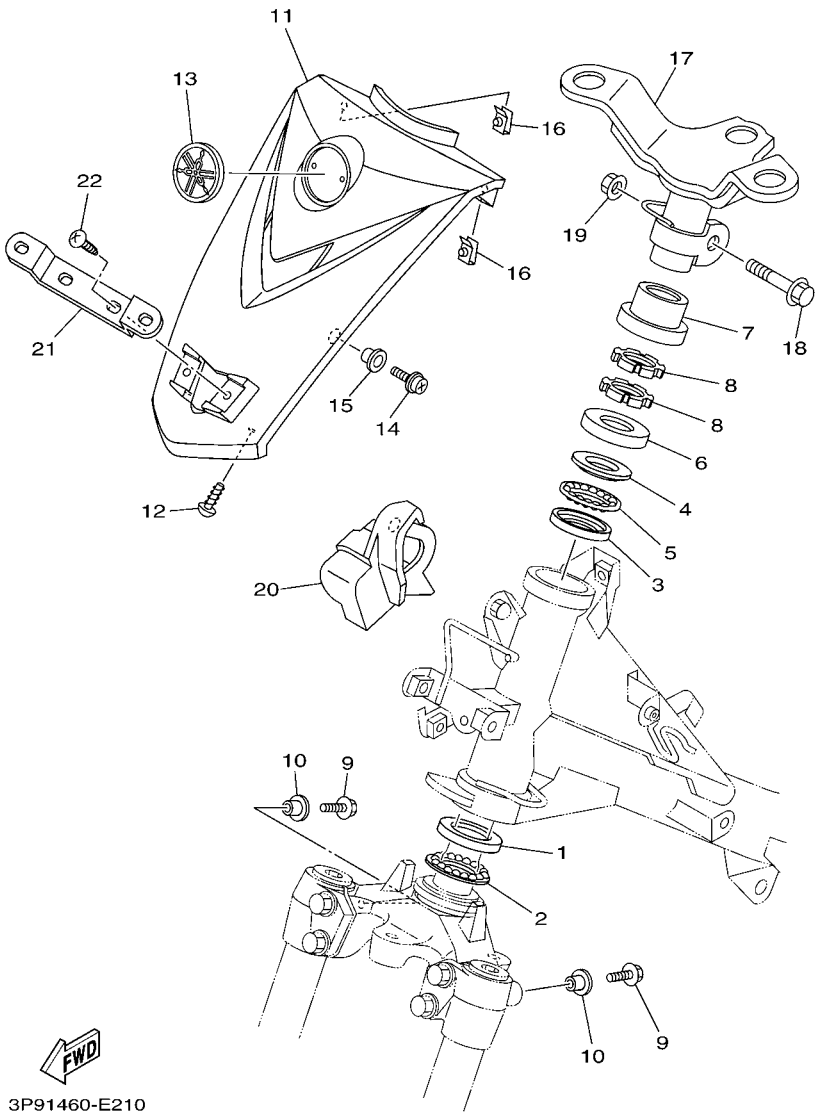

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	156–23412–00	RACE, BALL 2	1					
2	5TL–2341E–00	RETAINER, BALL BEARING	1					
3	22F–23412–01	RACE, BALL 2	1					
4	22F–23411–01	RACE, BALL 1	1					
5	5TL–2341E–10	RETAINER, BALL BEARING	1					
6	3AY–F3416–00	COVER, BALL RACE 2	1					
7	5LM–F3415–00	COVER, BALL RACE 1	1					
8	90179–25033	NUT	2					
9	95027–06016	BOLT, FLANGE	2					
10	90387–06681	COLLAR	2					
11	3S0–F3391–00–33	PANEL, FRONT	1					YB
12	97707–50012	SCREW, TRUSS HEAD TAPPING	2					
13	5MX–F3108–00	EMBLEM	1					
14	90159–06817	SCREW, WITH WASHER	2					
15	90387–062M9	COLLAR	2					
16	90183–05807	NUT, SPRING	2					
17	5LM–F3461–01	BRACKET, HANDLE	1					
18	90105–10036	BOLT, FLANGE	1					
19	90185–10808	NUT, SELF-LOCKING	1					
20	5TP–F3472–00	PROTECTOR	1					
21	5TP–H454E–01	BRACKET, NUMBER PLATE	1					
22	97707–50014	SCREW, TRUSS HEAD TAPPING	2					

FIG. 22 FRONT FORK

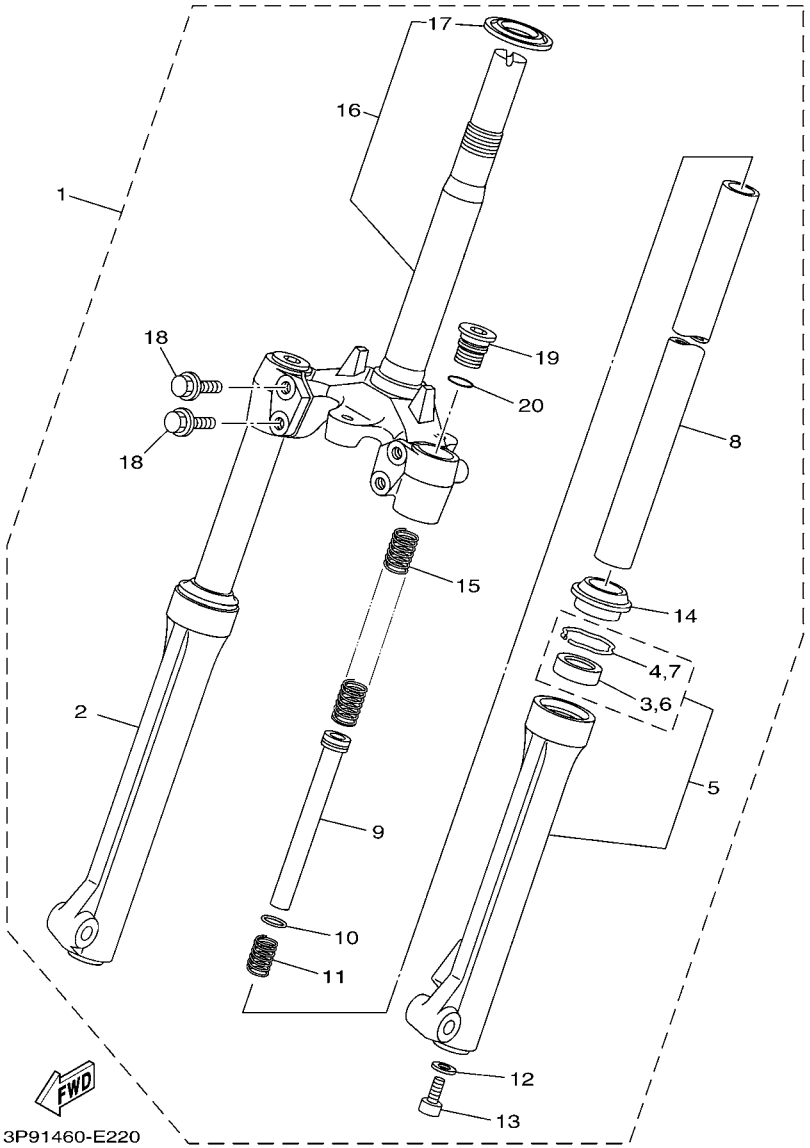

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3P9–F3100–00	FRONT FORK ASSY	1					
2	3P9–F3136–00	.TUBE, OUTER (RIGHT)	1					
3	4XC–F3145–00	..OIL SEAL	1					
4	1T8–F3156–00	..CLIP, OIL SEAL	1					
5	3P9–F3126–00	.TUBE, OUTER (LEFT)	1					
6	4XC–F3145–00	..OIL SEAL	1					
7	1T8–F3156–00	..CLIP, OIL SEAL	1					
8	2P2–F3110–00	.INNER TUBE COMP.1	2					
9	5TN–F3170–00	.CYLINDER COMP., FRONT FORK	2					
10	2JG–F3157–00	.RING, PISTON	2					
11	5NM–F3152–00	.SPRING, SUB	2					
12	509–F3158–L0	.GASKET	2					
13	278–F3181–50	.BOLT, HEXAGON SOCKET HEAD	2					
14	4XC–F3144–00	.SEAL, DUST	2					
15	2P2–F3141–00	.SPRING, FRONT FORK	2					
16	3S0–F3340–00	.UNDER BRACKET COMP.	1					
17	18G–23411–00	..RACE, BALL 1	1					
18	2P0–F3346–00	.BOLT 1	4					
19	5TL–F3111–00	.BOLT, CAP	2					
20	2JG–F3147–00	.O-RING	2					

FIG. 23 FUEL TANK

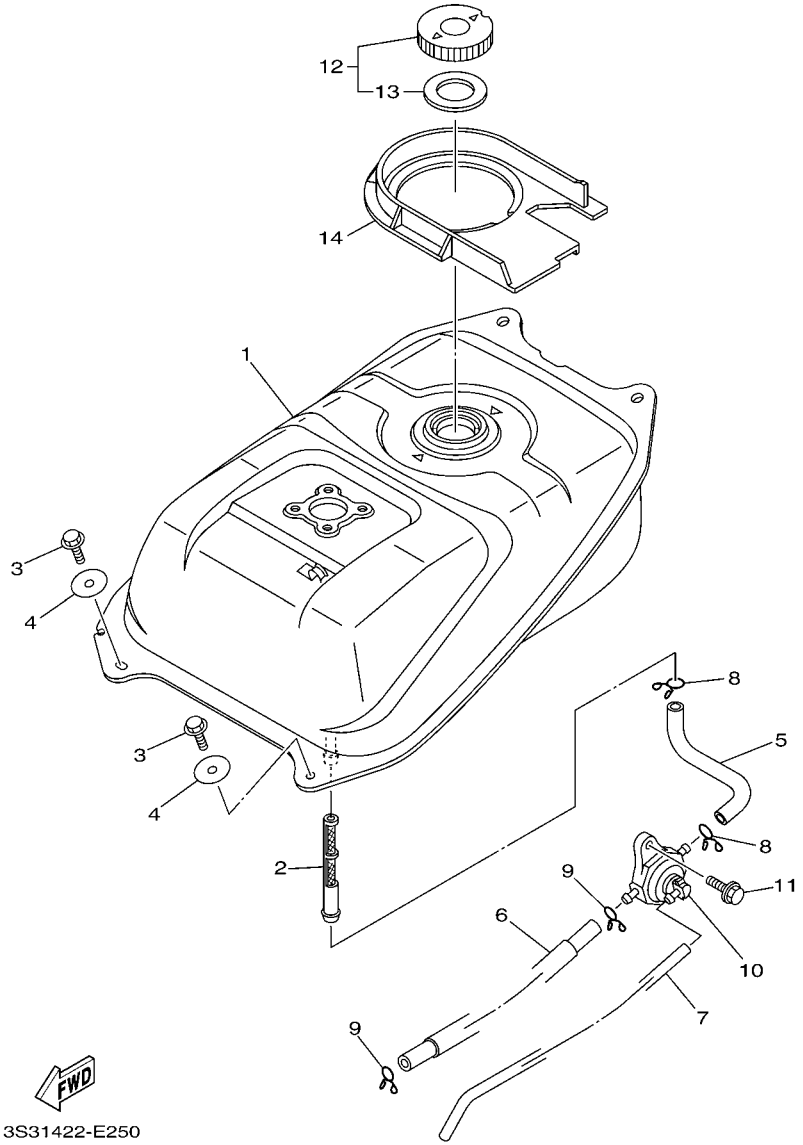

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F4110–00	FUEL TANK COMP.	1					
2	4YS–F4514–00	NET, FILTER 1	1					
3	95827–06016	BOLT, FLANGE	2					
4	90201–064K6	WASHER, PLATE	2					
5	3S0–F4311–00	PIPE, FUEL 1	1					
6	5TF–F4312–00	PIPE 2	1					
7	5TF–F4313–00	PIPE 3	1					
8	90467–10008	CLIP	2					
9	90467–09006	CLIP	2					
10	5TN–F4500–00	FUEL COCK ASSY 1	1					
11	95807–06014	BOLT, FLANGE	1					
12	4YY–F4610–00	CAP ASSY	1					
13	4YY–F4612–00	.GASKET, CAP	1					
14	3S0–F4141–00	PROTECTOR, FUEL TANK	1					

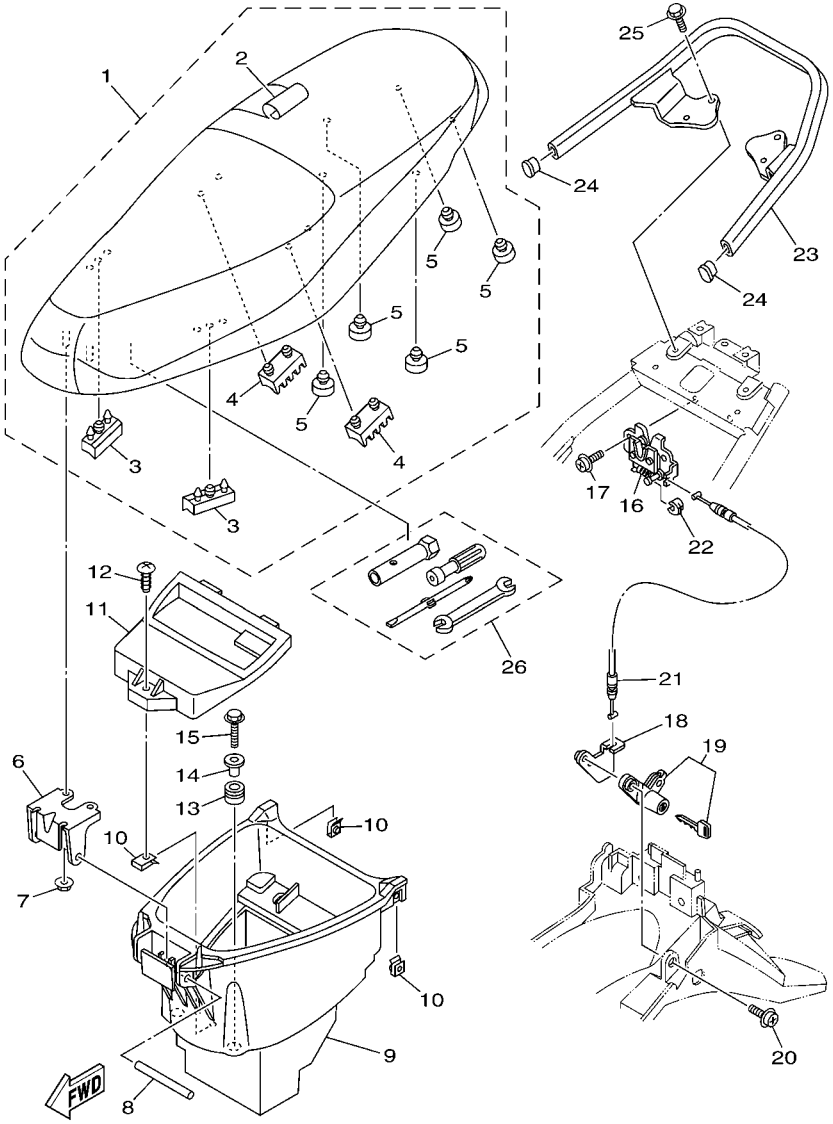

3S01460-E240

FIG. 24 SEAT

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F4730–00	DOUBLE SEAT ASSY	1					
2	3S0–F470F–00	.SEAT COVER COMP.	1					
3	5LM–F4747–00	.DAMPER, SEAT	2					
4	5LM–F4723–00	.DAMPER, SEAT	2					
5	5BP–F4741–00	.PAD, SEAT	5					
6	3S0–F4726–00	HINGE, SEAT	1					
7	95707–06500	NUT, FLANGE	2					
8	5TL–F4727–00	PIN, SEAT FITTING	1					
9	3S0–F473R–00	BOX 1	1					
10	90183–05807	NUT, SPRING	3					
11	3S0–F473T–00	LID 1	1					
12	97707–50016	SCREW, TRUSS HEAD TAPPING	1					
13	90480–14806	GROMMET	4					
14	90387–06889	COLLAR	4					
15	95027–06025	BOLT, FLANGE	4					
16	1S7–F4780–00	SEAT LOCK ASSY	1					
17	98507–06012	SCREW, PAN HEAD	2					
18	3S0–F117K–00	STAY, LOCK	1					
19	5TL–F4799–10	ROTOR ASSY	1					
20	90159–06033	SCREW, WITH WASHER	1					
21	3S0–F478E–00	CABLE, SEAT LOCK	1					
22	1S7–F4768–00	STOPPER	1					
23	3S0–F4773–00	HANDLE, SEAT	1					
24	3S0–F4742–00	GROMMET	2					
25	95807–06020	BOLT, FLANGE	4					
26	3S0–F8100–00	TOOL KIT	1					UR
	3S0–F8100–10	TOOL KIT	1					UR

FIG. 25 FRONT WHEEL

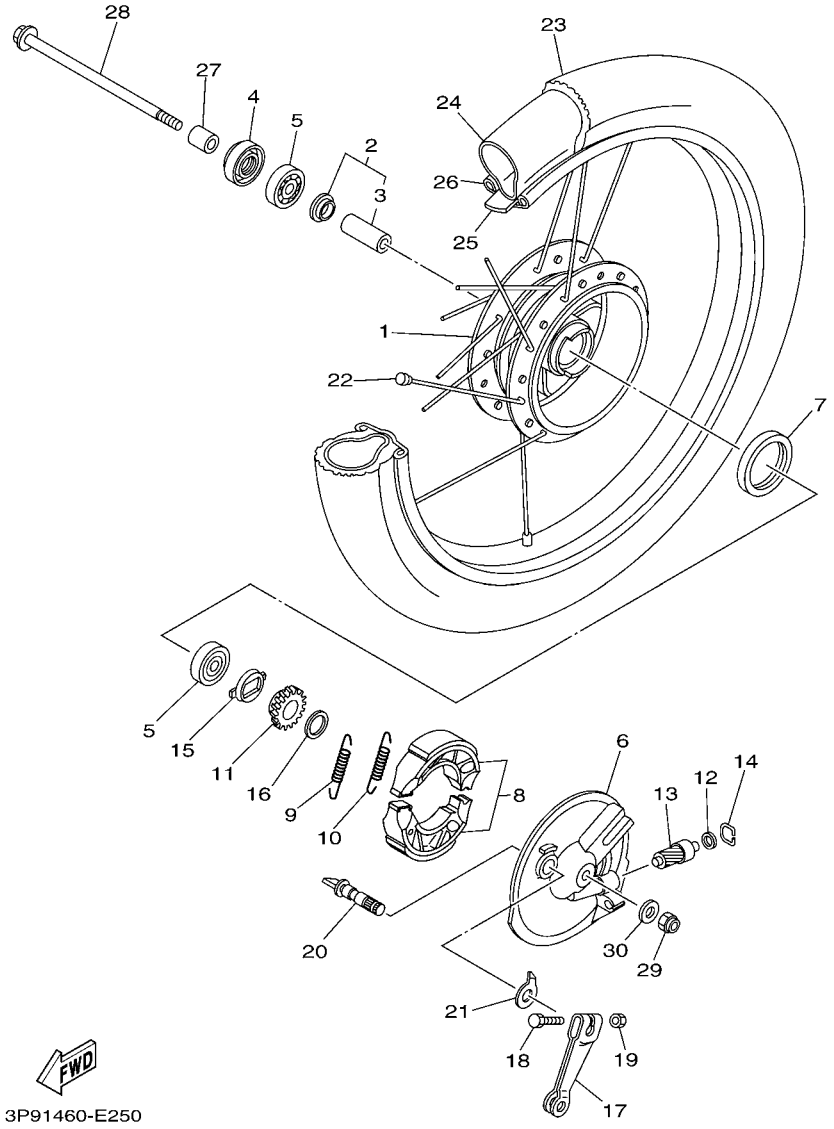

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3AY–F5111–01–33	HUB, FRONT	1					YB
2	4ST–F5116–01	FLANGE, SPACER 2	1					
3	90560–10292	.SPACER	1					
4	93106–20816	OIL SEAL	1					
5	93306–300X9	BEARING	2					
6	3P9–F5121–00–33	PLATE, BRAKE SHOE	1					YB
7	93105–47807	OIL SEAL	1					
8	3P9–F530K–00	BRAKE SHOE SET	1					
9	90506–12001	SPRING, TENSION	1					
10	90506–15001	SPRING, TENSION	1					
11	5ER–F5135–00	GEAR, DRIVE	1					
12	90201–064L6	WASHER, PLATE	1					
13	5ER–F5138–00	GEAR, METER	1					
14	3P9–F5137–00	RING, STOP	1					
15	3P9–F5149–00	CLUTCH, METER	1					
16	90201–20269	WASHER, PLATE	1					
17	3P9–F5155–00	LEVER, CAMSHAFT 1	1					
18	90101–06278	BOLT	1					
19	95307–06600	NUT	1					
20	3P9–F5351–00	CAMSHAFT	1					
21	4ST–F533A–00	PLATE, INDICATOR	1					
22	23T–F5104–00	SPOKE SET, FRONT	1					
23	94107–17803	TIRE (70/90-17 38P NR69)	1					INOUE
24	94222–17804	TUBE (2.25-17 TR4)	1					INOUE
25	94322–17858	BAND, RIM (1.20-17)	1					INOUE
26	94414–17849	RIM (1.40-17)	1					
27	90387–10277	COLLAR	1					

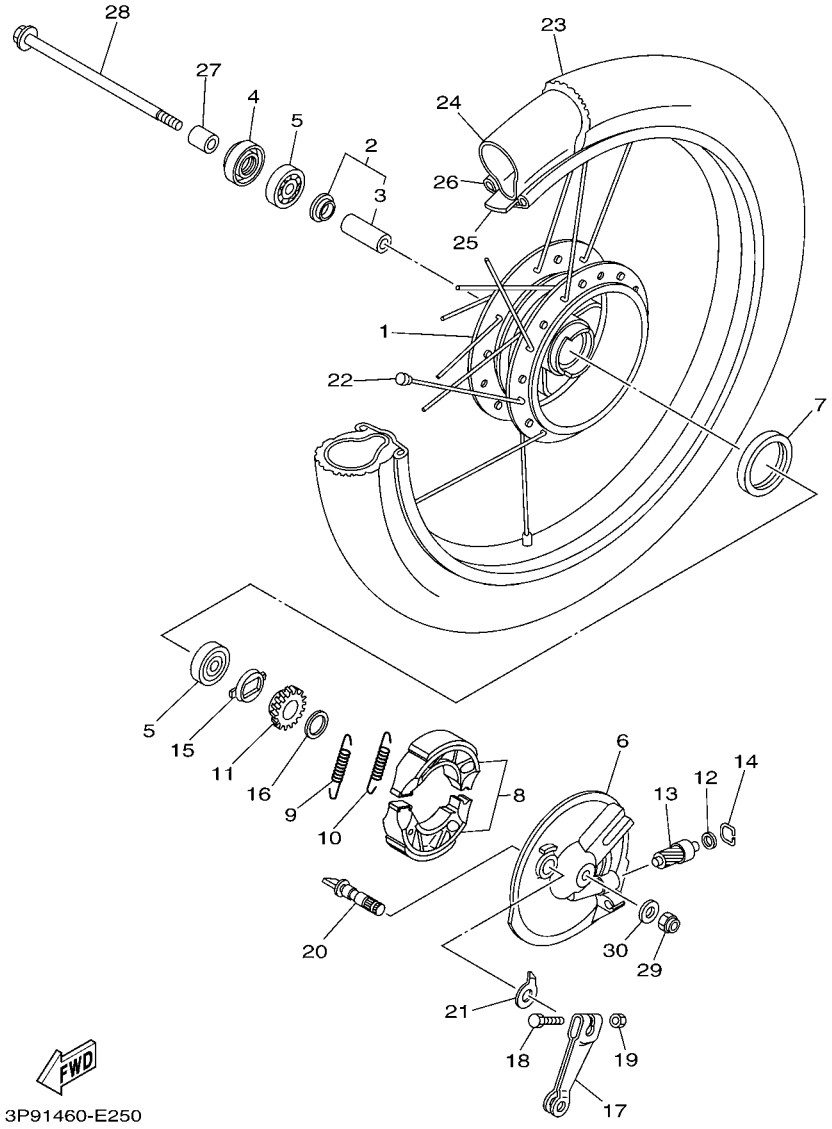

FIG. 25 FRONT WHEEL

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
28	3AY–F5181–01	AXLE, WHEEL	1					
29	90185–10811	NUT, SELF-LOCKING	1					
30	90201–101J1	WASHER, PLATE	1					

FIG. 26 REAR WHEEL

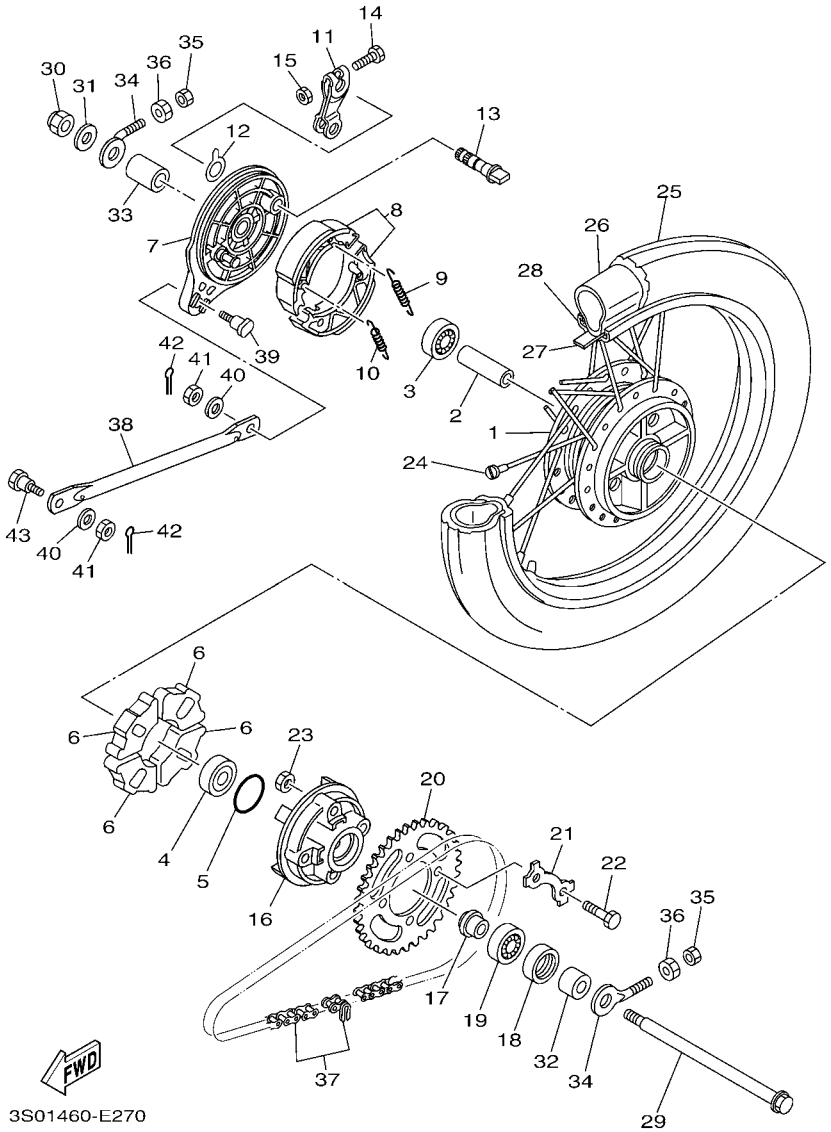

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	1S7–F5311–00–33	HUB, REAR	1					YB
2	90560–12145	SPACER	1					
3	93306–301YR	BEARING	1					
4	93306–301YP	BEARING	1					
5	93210–418G7	O-RING	1					
6	1S7–F5364–00	DAMPER	4					
7	1S7–F5321–00–33	PLATE, BRAKE SHOE	1					YB
8	1S7–F530K–00	BRAKE SHOE SET	1					
9	90506–12001	SPRING, TENSION	1					
10	90506–15001	SPRING, TENSION	1					
11	2P2–F5355–00	LEVER, CAMSHAFT	1					
12	5MX–F533A–00	PLATE, INDICATOR	1					
13	3Y6–F5351–00	CAMSHAFT	1					
14	90101–06278	BOLT	1					
15	95307–06600	NUT	1					
16	37J–F5366–02	CLUTCH, HUB	1					
17	90387–127Y0	COLLAR	1					
18	93106–26815	OIL SEAL	1					
19	93306–004XC	BEARING	1					
20	3S0–F5435–00	SPROCKET, DRIVEN (35T)	1					
21	5LM–F5412–00	WASHER	2					
22	90101–08847	BOLT	4					
23	90179–08639	NUT	4					
24	1S7–F5304–00	SPOKE SET, REAR	1					
25	94108–17803	TIRE (80/90-17 44P NR69)	1					INOUE
26	94227–17803	TUBE (2.75-17 TR4)	1					INOUE
27	94322–17858	BAND, RIM (1.20-17)	1					INOUE

FIG. 26 REAR WHEEL

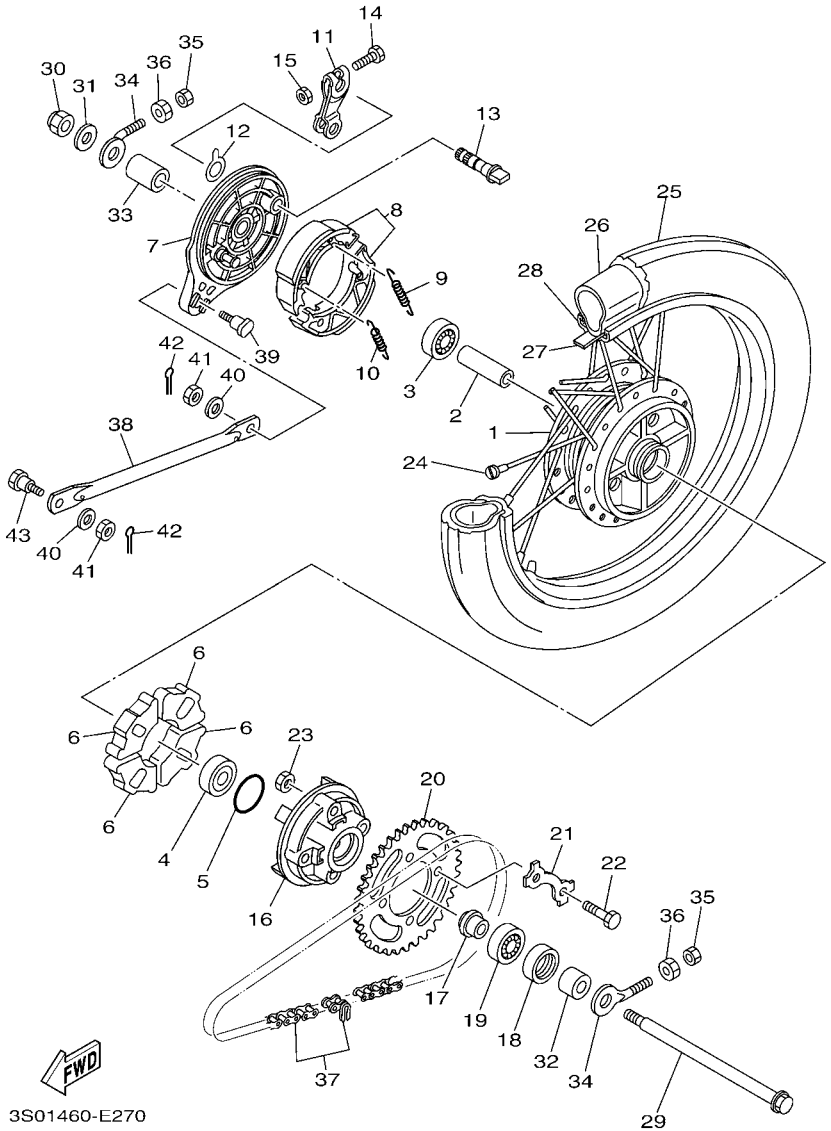

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
28	94414–17849	RIM (1.40-17)	1					
29	5LM–F5381–00	AXLE, WHEEL	1					
30	90185–12804	NUT, SELF-LOCKING	1					
31	90201–12688	WASHER, PLATE	1					
32	5TP–F5383–00	COLLAR, WHEEL	1					
33	90387–12841	COLLAR	1					
34	5LM–F5389–00	PULLER, CHAIN 2	2					
35	95307–06600	NUT	2					
36	90170–06184	NUT	2					
37	9X568–62097	CHAIN (FSCM 428-98L)	1					
38	3S0–F5371–00	BAR, TENSION	1					
39	90109–08183	BOLT	1					
40	92907–08200	WASHER	2					
41	95304–08700	NUT	2					
42	91401–20012	PIN, COTTER	2					
43	90109–08368	BOLT	1					

FIG. 27 STEERING HANDLE & CABLE

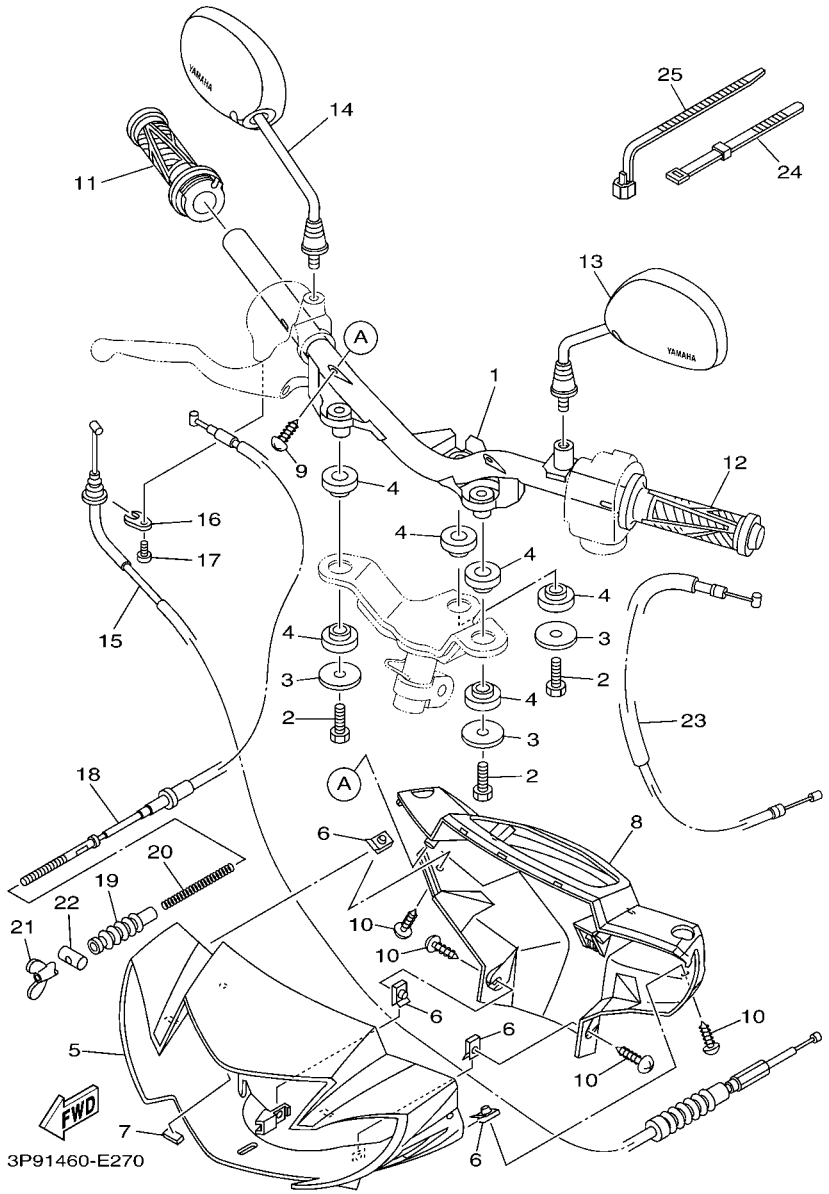

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F6210–00	HANDLE	1					
2	97007–08016	BOLT	3					
3	90201–08612	WASHER, PLATE	3					
4	3AY–F6113–00	DAMPER	6					
5	3P9–F6143–00–P1	COVER, HANDLEBAR UPPER 1	1					UR VRC1
	3P9–F6143–00–P0	COVER, HANDLEBAR UPPER 1	1					UR DPBMC
6	90183–05807	NUT, SPRING	4					
7	5LM–F6113–00	DAMPER	1					
8	3S0–F6145–00	COVER, HANDLEBAR UPPER 2	1					
9	97707–50016	SCREW, TRUSS HEAD TAPPING	2					
10	97707–50012	SCREW, TRUSS HEAD TAPPING	4					
11	3S0–F6240–00	GRIP ASSY	1					
12	3S0–F6241–00	GRIP	1					
13	5TP–F6280–00	REAR VIEW MIRROR ASSY (LEFT)	1					
14	5TP–F6290–00	REAR VIEW MIRROR ASSY (RIGHT)	1					
15	3S0–F6311–00	CABLE, THROTTLE 1	1					
16	4ST–F6393–00	HOLDER	1					
17	98507–05012	SCREW, PAN HEAD	1					
18	3P9–F6341–00	CABLE, BRAKE	1					
19	3P9–F6342–00	BOOT, CABLE	1					
20	90501–10073	SPRING, COMPRESSION	1					
21	90175–06013	NUT, WING	1					
22	90249–12008	PIN	1					
23	3S0–F6331–00	CABLE, STARTER 1	1					
24	3AY–H3936–10	BAND, SWITCH CORD	2					
25	90464–65801	CLAMP	1					

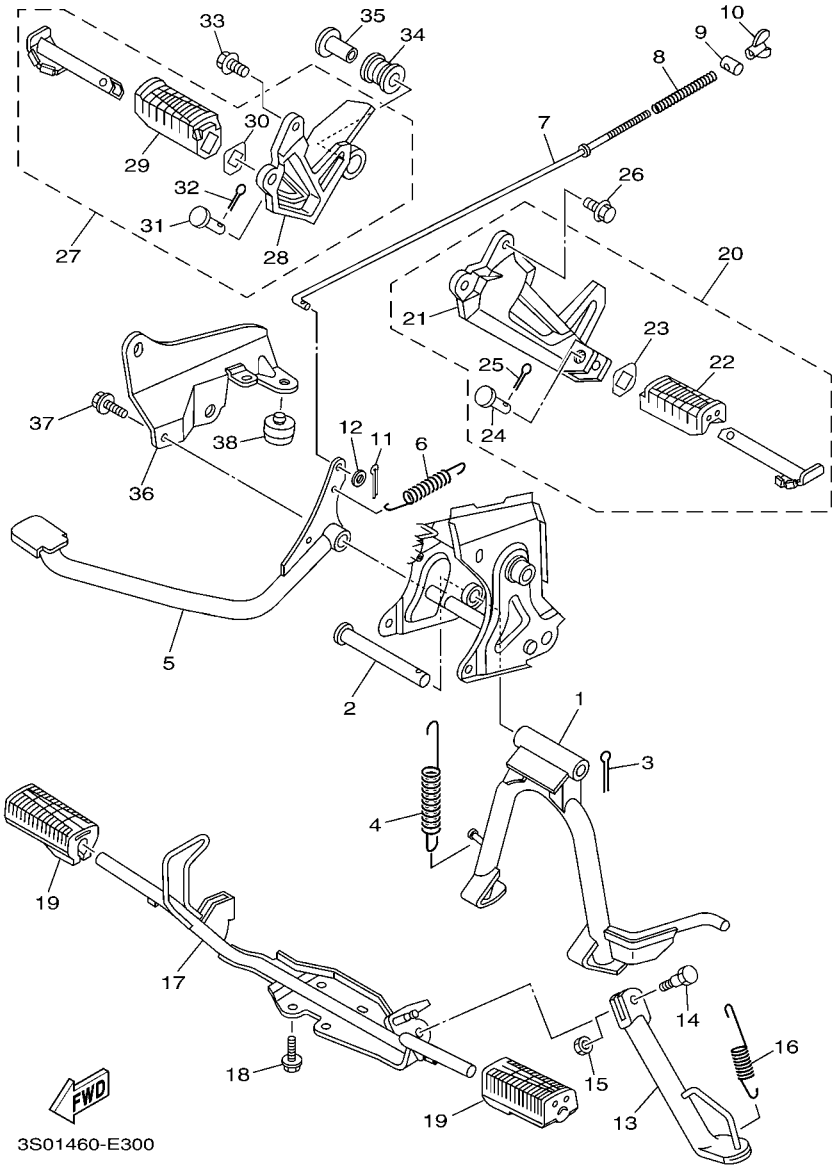

FIG. 28 STAND & FOOTREST

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–F7111–00	STAND, MAIN	1					
2	3S0–F7112–00	SHAFT, MAIN STAND	1					
3	91401–30030	PIN, COTTER	1					
4	90506–35806	SPRING, TENSION	1					
5	5LM–F7211–00	PEDAL, BRAKE	1					
6	90506–20810	SPRING, TENSION	1					
7	3S0–F7231–00	ROD, BRAKE	1					
8	90501–10245	SPRING, COMPRESSION	1					
9	90249–12008	PIN	1					
10	90175–06013	NUT, WING	1					
11	91401–20012	PIN, COTTER	1					
12	92907–06600	WASHER, PLATE	1					
13	5TP–F7311–00	STAND, SIDE	1					
14	90109–08034	BOLT	1					
15	95307–08700	NUT	1					
16	90506–20829	SPRING, TENSION	1					
17	5TP–F7411–00	FOOTREST 1	1					
18	95827–08016	BOLT, FLANGE	4					
19	5LM–F7413–00	COVER, FOOTREST	2					
20	3S0–F7430–00	REAR FOOTREST ASSY 1	1					
21	3S0–F7452–00	.BRACKET, FOOTREST 1	1					
22	5TP–F7433–00	.COVER, REAR FOOTREST	1					
23	5LM–F7445–00	.PLATE 1	1					
24	90240–08145	.PIN, CLEVIS	1					
25	91401–25015	.PIN, COTTER	1					
26	95817–08020	BOLT, FLANGE	2					
27	3S0–F7440–00	REAR FOOTREST ASSY 2	1					

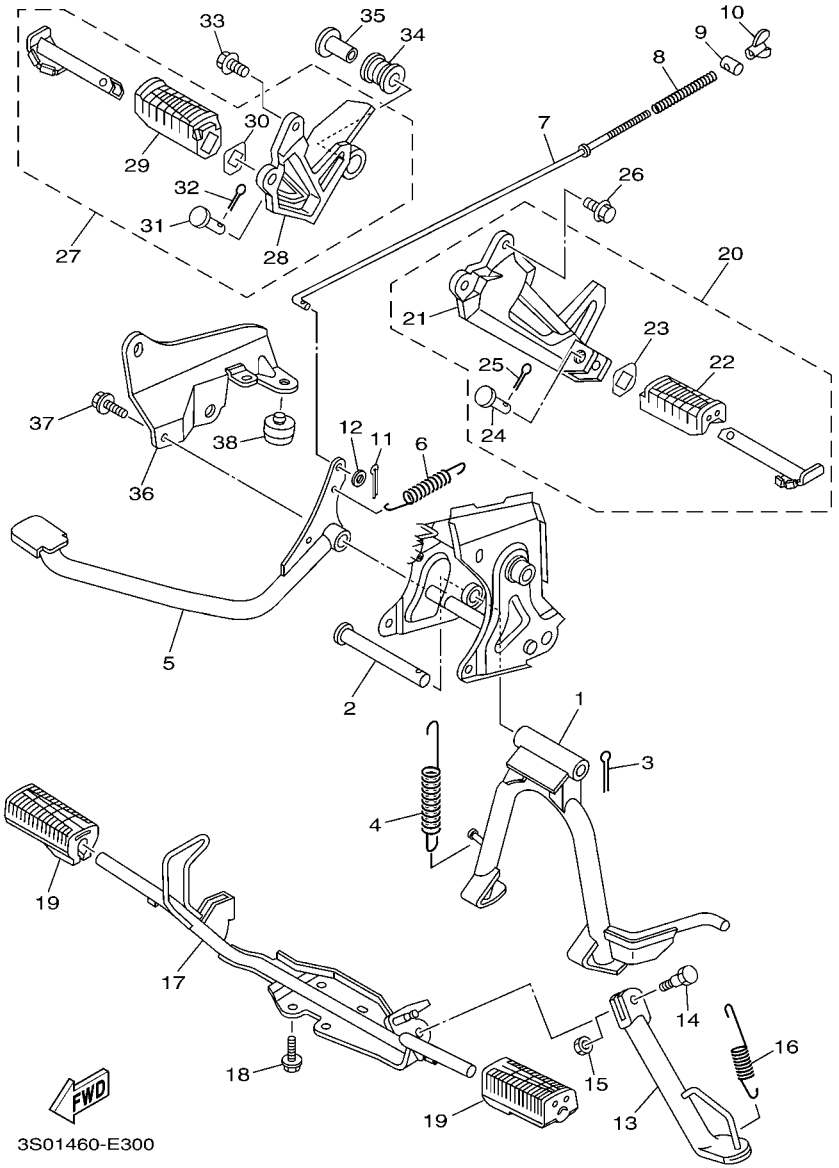

FIG. 28 STAND & FOOTREST

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
28	3S0–F7462–00	.BRACKET, FOOTREST 2	1					
29	5TP–F7444–00	.COVER, REAR FOOTREST	1					
30	5LM–F7445–00	.PLATE 1	1					
31	90240–08145	.PIN, CLEVIS	1					
32	91401–25015	.PIN, COTTER	1					
33	95817–08020	BOLT, FLANGE	2					
34	5TP–F7424–00	DAMPER, FOOTREST 2	1					
35	90387–10810	COLLAR	1					
36	3S0–F194J–00	STAY, MUFFLER	1					
37	95827–08016	BOLT, FLANGE	1					
38	5LM–F4741–10	PAD, SEAT	1					

FIG. 29 LEG SHIELD

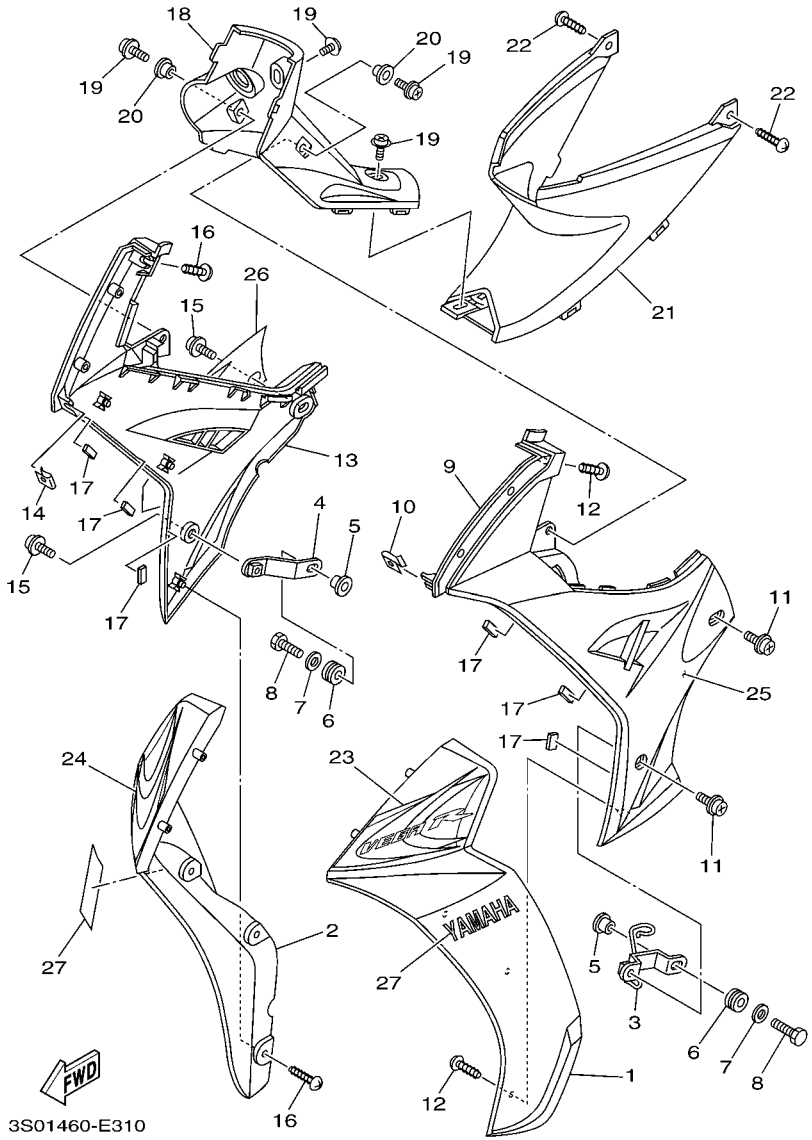

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–F8311–00–P1	LEG SHIELD 1	1					UR VRC1
	3S0–F8311–00–P0	LEG SHIELD 1	1					UR DPBMC
2	3S0–F8312–00–P1	LEG SHIELD 2	1					UR VRC1
	3S0–F8312–00–P0	LEG SHIELD 2	1					UR DPBMC
3	3S0–F8321–00	STAY 1	1					
4	3S0–F8322–00	STAY 2	1					
5	90387–06841	COLLAR	2					
6	90480–13018	GROMMET	2					
7	90201–06557	WASHER, PLATE	2					
8	97007–06020	BOLT	2					
9	3S0–F8385–00–P1	COVER, LOWER	1					UR VRC1
	3S0–F8385–00–P0	COVER, LOWER	1					UR DPBMC
10	90183–05807	NUT, SPRING	1					
11	90159–06817	SCREW, WITH WASHER	2					
12	97707–50012	SCREW, TRUSS HEAD TAPPING	6					
13	3S0–F8395–00–P1	COVER, UNDER	1					UR VRC1
	3S0–F8395–00–P0	COVER, UNDER	1					UR DPBMC
14	90183–05807	NUT, SPRING	1					
15	90159–06817	SCREW, WITH WASHER	2					
16	97707–50012	SCREW, TRUSS HEAD TAPPING	6					
17	5LM–F8371–00	DAMPER	6					
18	3S0–F842M–00	COVER 1	1					
19	90159–06817	SCREW, WITH WASHER	4					
20	90387–06846	COLLAR	2					
21	3S0–F842N–00	COVER 2	1					
22	97707–50016	SCREW, TRUSS HEAD TAPPING	2					
23	3P9–F8368–00	EMBLEM	1					UR FOR VRC1

FIG. 29 LEG SHIELD

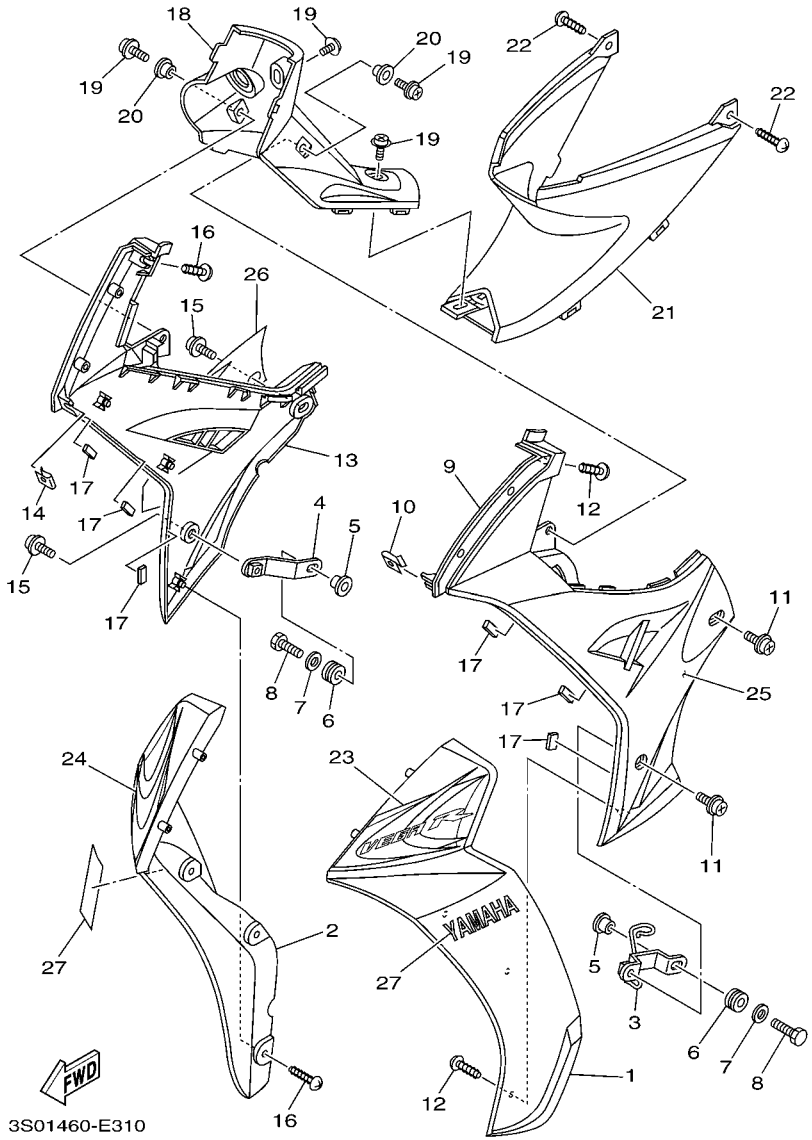

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
23	3P9–F8368–10	EMBLEM	1					UR FOR DPBMC
24	3P9–F831Y–00	GRAPHIC 14	1					UR FOR VRC1
	3P9–F831Y–10	GRAPHIC 14	1					UR FOR DPBMC
25	3P9–F8391–00	GRAPHIC 1	1					UR FOR VRC1
	3P9–F8391–10	GRAPHIC 1	1					UR FOR DPBMC
26	3P9–F8392–00	GRAPHIC 2	1					UR FOR VRC1
	3P9–F8392–10	GRAPHIC 2	1					UR FOR DPBMC
27	99231–00120	EMBLEM, YAMAHA	2					

FIG. 30 GENERATOR

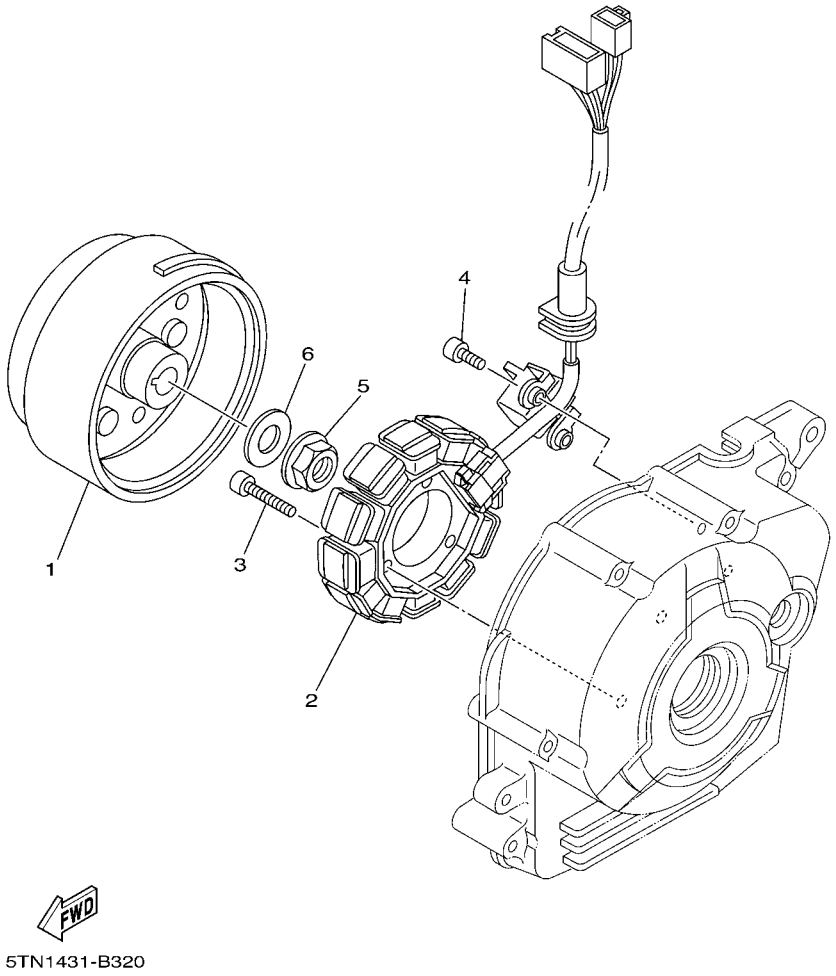

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–H1450–00	ROTOR ASSY	1					
2	5TP–H1410–00	STATOR ASSY	1					
3	91317–06025	BOLT	3					
4	91317–06014	BOLT	2					
5	95707–12500	NUT, FLANGE	1					
6	90201–122H1	WASHER, PLATE	1					

FIG. 31 STARTING MOTOR

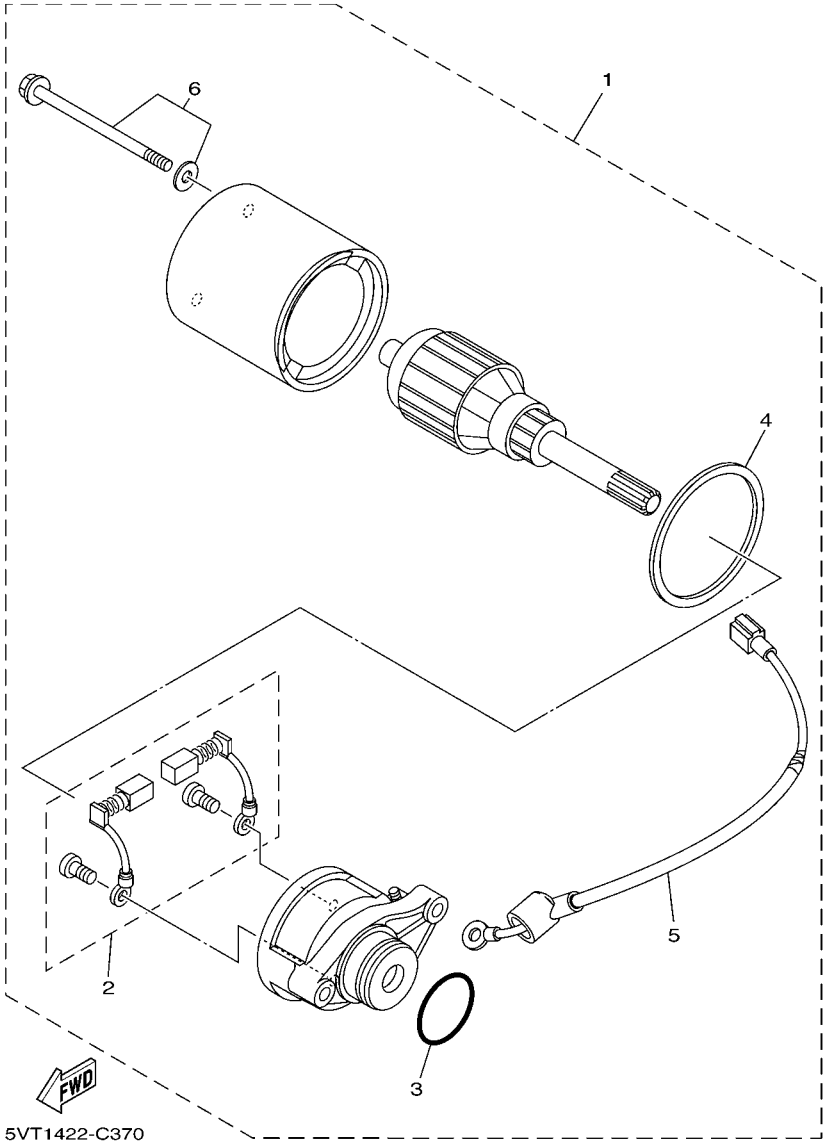

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–H1800–10	STARTING MOTOR ASSY	1					
2	5TP–H1801–00	.BRUSH SET	1					
3	5TP–H182L–00	.O-RING 1	1					
4	4ST–81861–00	.GASKET	1					
5	3S0–H183G–10	.CORD COMP.	1					
6	5TP–H2828–00	.BOLT SET	2					

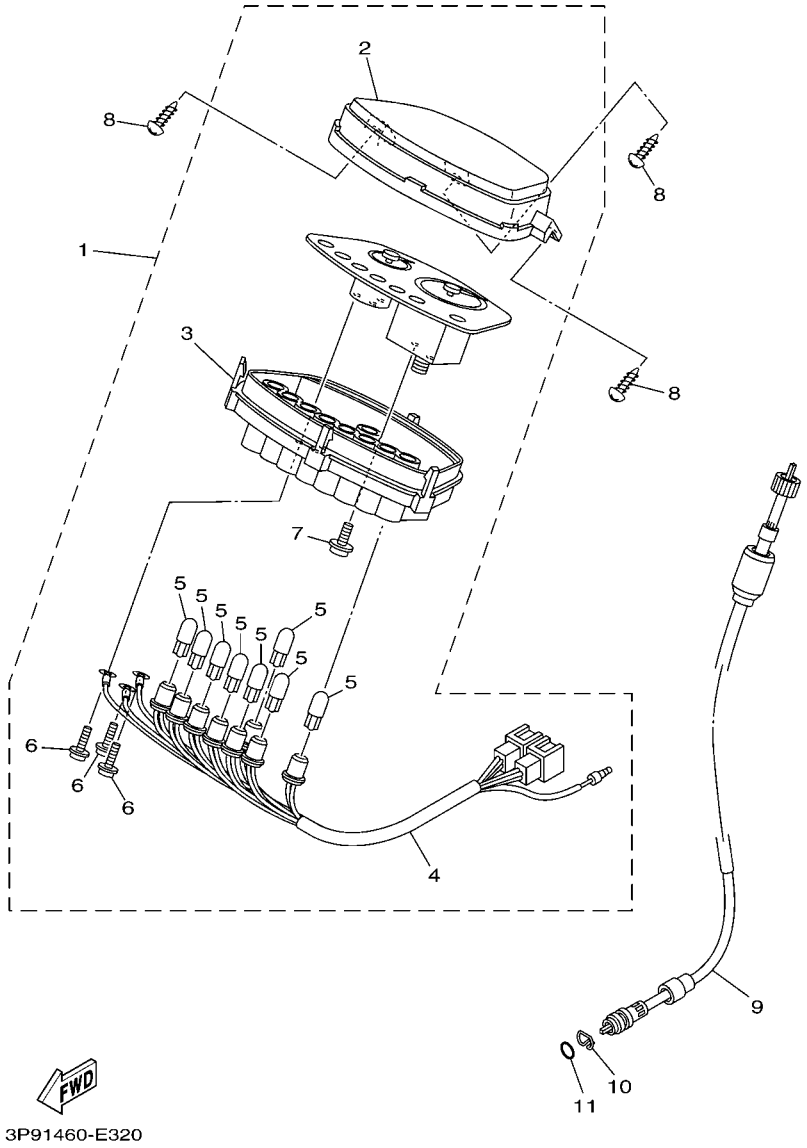

3P91460-E320

FIG. 32 METER

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–H3510–00	SPEEDOMETER ASSY	1					
2	1S7–H3511–00	.LENS, SPEEDOMETER	1					
3	3S0–H353F–00	.CASE, METER LOWER	1					
4	3S0–H3509–00	.SOCKET CORD ASSY	1					
5	1Y7–83517–00	.BULB (12V-1.7W T10)	8					
6	90159–03102	.SCREW, WITH WASHER	3					
7	90167–04021	.SCREW, TAPPING	2					
8	97707–50016	SCREW, TRUSS HEAD TAPPING	3					
9	3AY–H3550–00	SPEEDOMETER CABLE ASSY	1					
10	2E9–25137–01	RING, STOP	1					
11	93210–108H4	O-RING	1					

FIG. 33 HEADLIGHT

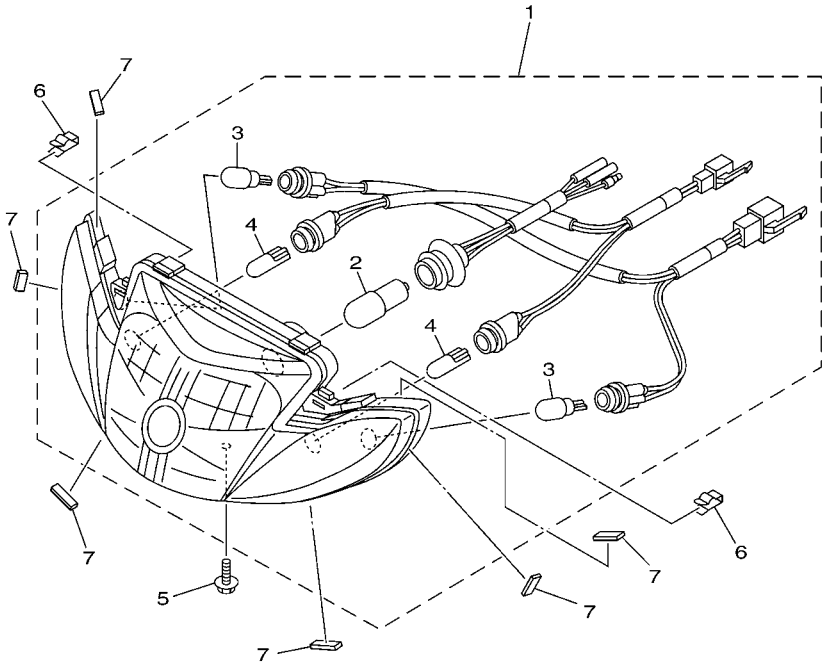

3S01460-E350

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–H4300–00	HEADLIGHT ASSY	1					
2	5HV–H4314–00	.BULB (12V-32/32W)	1					
3	5LL–H3311–00	.BULB, FLASHER (12V-10W)	2					AMBER
4	5YP–H5353–00	.BULB (12V-5W)	2					
5	95807–06010	BOLT, FLANGE	1					
6	3S0–H4374–00	CLIP	2					
7	5LM–F6113–00	DAMPER	6					

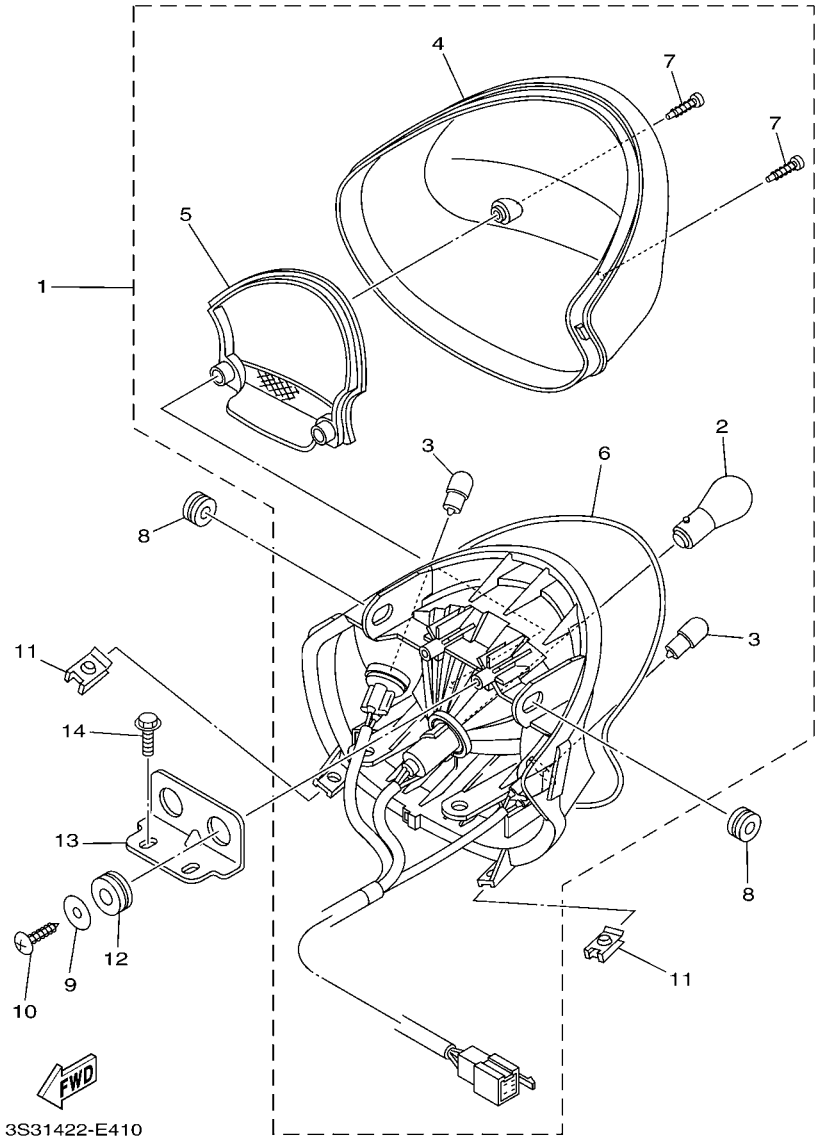

FIG. 34 TAILLIGHT

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–H4710–00	TAILLIGHT UNIT ASSY	1					
2	4AC–H4714–00	.BULB (12V-21/5W)	1					
3	5HV–H3311–00	.BULB, FLASHER (12V-10W)	2					AMBER
4	3S0–H4743–00	.LENS, LICENCE LIGHT	1					
5	3S0–H4721–00	.LENS, TAILLIGHT	1					
6	3S0–H4723–00	.GASKET, TAIL LENS	1					
7	9770L–40620	.SCREW, TAPPING	2					
8	90480–13005	GROMMET	2					
9	90201–06071	WASHER, PLATE	2					
10	97707–50014	SCREW, TRUSS HEAD TAPPING	2					
11	90183–05807	NUT, SPRING	2					
12	90480–18895	GROMMET	2					
13	3S0–H4702–00	BRACKET, TAILLIGHT	1					
14	95807–06012	BOLT, FLANGE	2					

FIG. 35 HANDLE SWITCH & LEVER

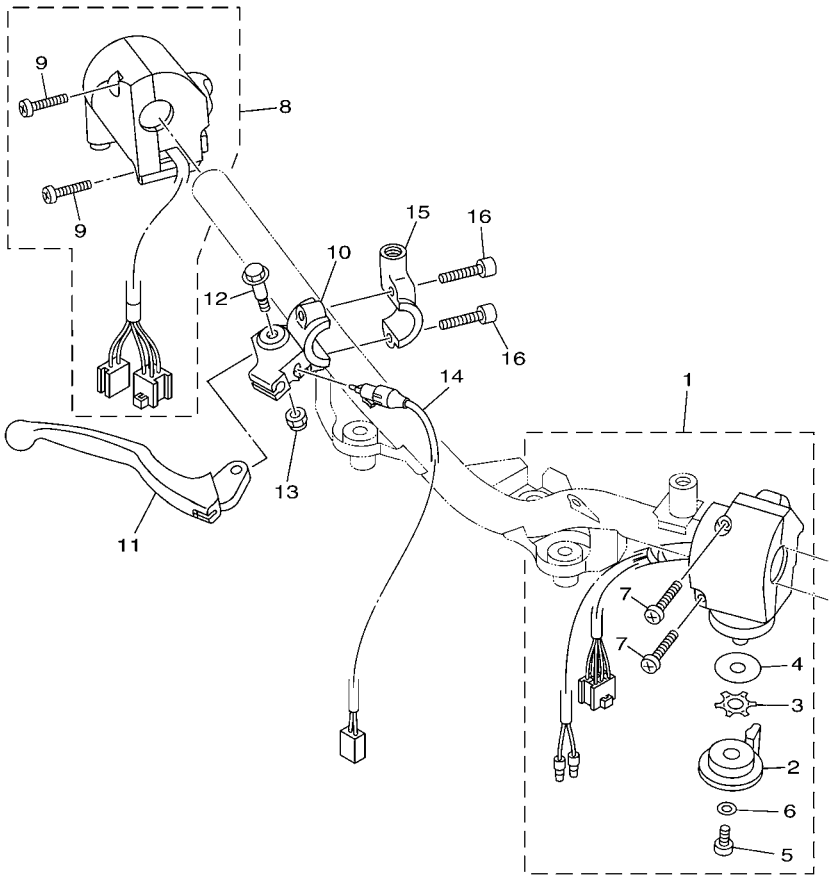

3P91460-E350

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	3S0–H3973–00	SWITCH, HANDLE 3	1					
2	5TL–H3941–00	.LEVER, STARTER	1					
3	5TL–H3947–00	.SPRING	1					
4	5TL–H397X–00	.SPACER	1					
5	9850L–06008	.SCREW, PAN HEAD	1					
6	9290L–06200	.WASHER	1					
7	9850M–05025	.SCREW, PAN HEAD	2					
8	3S0–H3975–00	SWITCH, HANDLE 2	1					
9	9850M–05025	.SCREW, PAN HEAD	2					
10	3P9–H2921–00	HOLDER, LEVER 2	1					
11	3P9–H3922–00	LEVER 2	1					
12	90109–06827	BOLT	1					
13	95607–06100	NUT, U	1					
14	4ST–H3980–10	FRONT STOP SWITCH ASSY	1					
15	3P9–H2923–00	HOLDER, LEVER LOWER	1					
16	91317–06025	BOLT	2					

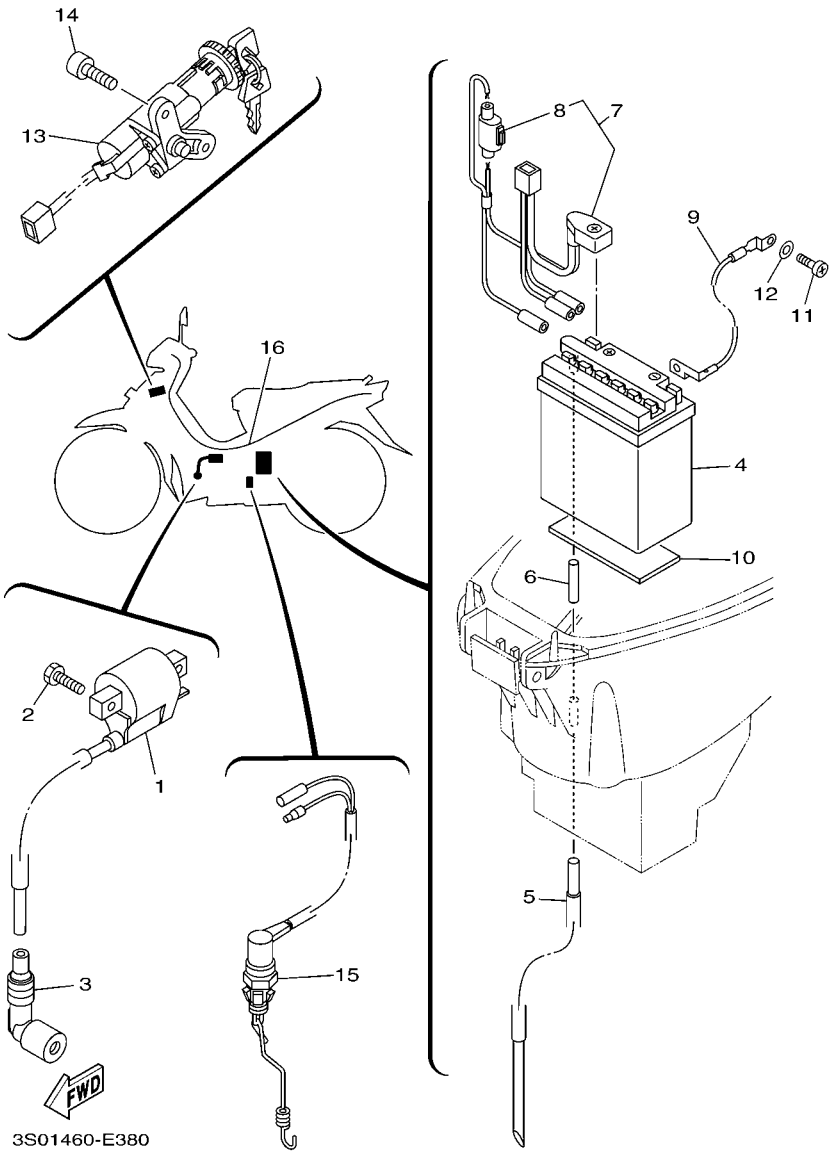

FIG. 36 ELECTRICAL 1

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TP–H2310–00	IGNITION COIL ASSY	1					
2	97007–06016	BOLT	2					
3	5TP–H2370–00	PLUG CAP ASSY	1					
4	3AY–H2110–00	BATTERY ASSY (YB5L-B 12V-5AH)	1					UR YUASA
	3AY–H2110–10	BATTERY ASSY (GM5Z-3B)	1					UR
5	90445–08816	HOSE (L350)	1					
6	90445–08819	HOSE (L40)	1					
7	3S0–H2115–00	WIRE, PLUS LEAD	1					
8	5TP–H2150–00	.FUSE HOLDER ASSY	1					
9	3S0–H2116–00	WIRE, MINUS LEAD	1					
10	3S0–H2176–00	DAMPER	1					
11	98507–06010	SCREW, PAN HEAD	1					
12	92907–06600	WASHER, PLATE	1					
13	5TP–H2501–20	MAIN SWITCH STEERING LOCK	1					
14	91317–06012	BOLT	2					
15	4ST–H2530–40	STOP SWITCH ASSY	1					
16	3S0–H2590–00	WIRE HARNESS ASSY	1					

FIG. 37 ELECTRICAL 2

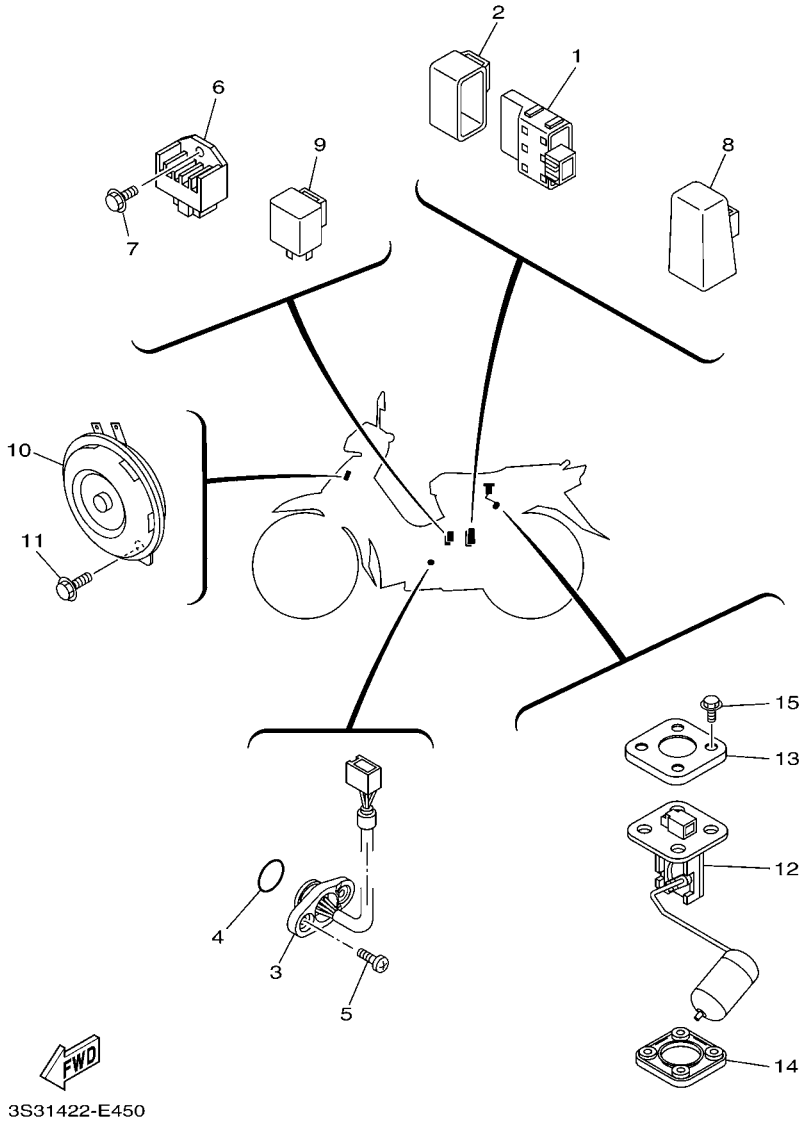

REF. NO.	PART NO.	DESCRIPTION	3P91					REMARKS
1	5TF–H5540–00	C.D.I. UNIT ASSY	1					
2	5BP–H5546–00	BAND	1					
3	3S0–H2540–00	NEUTRAL SWITCH ASSY	1					
4	93210–228G1	O-RING	1					
5	98507–05010	SCREW, PAN HEAD	2					
6	2P2–H1960–00	RECTIFIER & REGULATOR ASSY	1					
7	95027–06014	BOLT, FLANGE	1					
8	5TP–H1940–00	STARTER RELAY ASSY	1					
9	5TF–H3350–00	FLASHER RELAY ASSY	1					
10	5TP–H3371–00	HORN	1					
11	95807–06010	BOLT, FLANGE	1					
12	3S0–H5752–00	SENDER UNIT ASSY, FUEL METER	1					
13	5ER–H5757–00	RETAINER	1					
14	4US–H5753–00	GASKET, SENDER UNIT	1					
15	90119–05071	BOLT, WITH WASHER	4					

PART NO.	REF. NO.
4ST–11134–11	1 – 2
5TN–12117–00	3 – 6
1WG–12118–00	3 – 5
22F–12151–10	3 – 8
22F–12159–00	3 – 9
5TN–14103–00	7 – 22
4GL–14104–00	7 – 21
5WT–1410A–00	7 – 17
5TN–14112–00	7 – 5
5TN–14131–00	7 – 4
5TN–14141–18	7 – 15
2MM–14142–17	7 – 12
18A–14143–21	7 – 13
5TN–14147–00	7 – 7
5TN–14148–00	7 – 14
5TN–14150–10	7 – 28
802–14161–00	7 – 2
3RW–14174–00	7 – 18
353–14186–00	7 – 9
5LW–14191–00	7 – 25
32N–14196–00	7 – 26
4NM–14198–00	7 – 3
5TN–14216–00	7 – 27
4GL–14239–00	7 – 8
5TN–1490J–00	7 – 6
5TN–14940–00	7 – 19
5DV–14985–00	7 – 16
4BA–18542–00	15 – 5
18G–23411–00	22 – 17
22F–23411–01	21 – 4
156–23412–00	21 – 1
22F–23412–01	21 – 3
5TL–2341E–00	21 – 2
5TL–2341E–10	21 – 5
5TN–24423–00	7 – 20
2E9–25137–01	32 – 10
4ST–81861–00	31 – 4
1Y7–83517–00	32 – 5
3S0–E1111–00	1 – 1
5TP–E111F–00	4 – 4
5TP–E1166–00	9 – 4
3S0–E1181–00	1 – 13
4ST–E1185–00	1 – 5
4ST–E1186–00	1 – 8
4YS–E1198–00	5 – 7
5TP–E1310–01	1 – 16
4ST–E1351–02	1 – 18
5TP–E1422–00	2 – 5
5ER–E1445–00	2 – 6
5TP–E1603–20	2 – 12
5TP–E1605–20	2 – 12
5TP–E1607–20	2 – 12
3S0–E1631–00–A0	2 – 9
5LM–E1633–00	2 – 10
3S0–E1636–00	2 – 9
3S0–E1638–00	2 – 9
5TN–E1651–02	2 – 4
5LM–E1681–00	2 – 2
5TP–E2111–00	3 – 1
5TN–E2114–00	3 – 4
5ER–E2119–00	3 – 3
5TP–E2121–00	3 – 2
5TN–E2126–00	3 – 7
4ST–E2156–00	3 – 11
5TP–E2170–00	4 – 1
5TP–E2176–00	4 – 6
5TN–E2210–10	4 – 13
3S0–E2213–00	4 – 14
5TN–E2231–10	4 – 10
5TN–E2241–10	4 – 11
3S0–E3104–00	5 – 1
5TP–E3324–00	5 – 9
5TP–E3325–00	5 – 2
5TP–E3329–00	5 – 4
4ST–E3411–00	5 – 8
5TP–E3451–00	5 – 10
3S0–E3542–00	8 – 28
3S0–E3586–00	6 – 1
5TP–E3595–00	6 – 2
5TP–E4101–00	7 – 1
5TP–E4197–10	7 – 29
5TP–E4411–00	6 – 7
5TP–E4412–00	6 – 9
5TP–E4423–00	6 – 13
5TP–E443E–00	6 – 15
5TP–E4451–00	6 – 8
5TP–E4452–00	6 – 12
5TP–E4453–00	6 – 10
5TP–E4457–00	6 – 11
5TP–E4613–00	8 – 19
3S0–E4711–00	8 – 1
3S0–E4718–00	8 – 2
3S0–E4728–00	8 – 5
5LM–E4766–00	8 – 7
5TP–E4766–00	8 – 4
3S0–E4803–01	8 – 26
3S0–E4806–00	8 – 33
3S0–E4815–00	8 – 22
5TN–E4871–00	8 – 21
3S0–E4881–00	8 – 24
3S0–E4882–00	8 – 30
3S0–E4883–00	8 – 35
5TP–E5113–00	10 – 11
3S0–E5150–00	9 – 1
5TP–E5155–00	9 – 6
5TP–E5316–00	9 – 15
5TP–E5362–00	10 – 22
4ST–E5371–00	9 – 3
3S0–E5411–00	10 – 1
3S0–E5418–00	10 – 12
3S0–E5421–00	10 – 17
4ST–E5451–01	10 – 2
4ST–E5461–11	10 – 18
5TP–E5492–10	10 – 16
5TN–E5512–00	12 – 1
5TP–E5524–00	12 – 3
5HV–E5580–00	12 – 5
5HV–E5583–00	12 – 6
5LM–E5620–00	11 – 11
5LM–E5641–00	11 – 2
4WH–E5644–00	11 – 6
	12 – 4
5TP–E5660–00	11 – 1
3S0–E5664–00	11 – 9
5LM–E5664–00	11 – 10
4WH–E5671–00	11 – 4
5TP–E6135–00	13 – 24
5TP–E6150–00	13 – 13
5TN–E6321–00	13 – 16
5TP–E6324–00	13 – 15
5HV–E6346–00	9 – 2
5TP–E6350–00	13 – 21
5TP–E6351–00	13 – 17
5LM–E6356–01	13 – 27
5LM–E6357–00	13 – 26
5TP–E6371–00	13 – 14
5LM–E6512–00	13 – 6
5TP–E6586–00	13 – 7
5TP–E6611–00	13 – 2
5TP–E6620–00	13 – 3
5TP–E6626–00	13 – 4
5TP–E7121–00	14 – 6
5TP–E7131–00	14 – 2
5TP–E7141–00	14 – 3
5TP–E7211–00	14 – 15
5TP–E7231–00	14 – 14
5TP–E7241–00	14 – 13
5TP–E7402–00	14 – 10
4ST–E7411–00	14 – 1
5TP–E8101–00	16 – 1
5TP–E8111–10	16 – 24
5ER–E8120–20	15 – 7
5TP–E8140–00	16 – 9
5TP–E8152–10	16 – 5
5TP–E8172–00	16 – 3
5LM–E8173–00	16 – 19
5TP–E8179–00	16 – 2
5WT–E817A–00	16 – 20
5TP–E8181–00	16 – 4
5TN–E8185–10	15 – 2
4YS–E8186–00	16 – 21
5TP–E8337–00	16 – 13
3S0–E8511–00	15 – 9
5LM–E8512–00	15 – 10
3S0–E8531–00	15 – 8
3S0–E8540–00	15 – 1
5TP–E8699–00	16 – 10
3S0–F1110–00	17 – 1
3S0–F117K–00	24 – 18
5TP–F117R–00	17 – 6
5TP–F139R–00	17 – 5
3S0–F139U–00	17 – 9
3S0–F1511–00–P0	18 – 1
3S0–F1511–00–P1	18 – 1
4ST–F1518–00	18 – 6
3S0–F153E–30	19 – 16
3S0–F1556–00	18 – 2
3S0–F1611–00	18 – 10
3P9–F1679–00	17 – 7
3S0–F171E–00–33	19 – 12
3S0–F1721–00	19 – 1
3S0–F1731–00–33	19 – 3
3P9–F173E–00	19 – 14
3P9–F173E–10	19 – 14
3P9–F173F–00	19 – 15
3P9–F173F–10	19 – 15
3S0–F1741–00–33	19 – 7
3P9–F174J–00	19 – 17
3P9–F174J–10	19 – 17
3P9–F174K–00	19 – 18
3P9–F174K–10	19 – 18
3S0–F194J–00	28 – 36
3S0–F2100–00–33	20 – 1
3HB–F2123–00	20 – 2
5LM–F2141–00	20 – 4
5TP–F2151–00	20 – 3
3S0–F2210–01	20 – 10
3S0–F2311–00	20 – 8
3P9–F3100–00	22 – 1
5MX–F3108–00	21 – 13
2P2–F3110–00	22 – 8
5TL–F3111–00	22 – 19
3P9–F3126–00	22 – 5
3P9–F3136–00	22 – 2
2P2–F3141–00	22 – 15
4XC–F3144–00	22 – 14
4XC–F3145–00	22 – 3
	22 – 6
2JG–F3147–00	22 – 20
5NM–F3152–00	22 – 11
1T8–F3156–00	22 – 4
	22 – 7
2JG–F3157–00	22 – 10
509–F3158–L0	22 – 12
5TN–F3170–00	22 – 9
278–F3181–50	22 – 13
3S0–F3340–00	22 – 16
2P0–F3346–00	22 – 18
3S0–F3391–00–33	21 – 11
5LM–F3415–00	21 – 7
3AY–F3416–00	21 – 6
5LM–F3461–01	21 – 17
5TP–F3472–00	21 – 20
3S0–F4110–00	23 – 1
3S0–F4141–00	23 – 14
3S0–F4311–00	23 – 5
5TF–F4312–00	23 – 6
5TF–F4313–00	23 – 7
5TN–F4500–00	23 – 10
4YS–F4514–00	23 – 2
4YY–F4610–00	23 – 12
4YY–F4612–00	23 – 13
3S0–F470F–00	24 – 2
5LM–F4723–00	24 – 4
3S0–F4726–00	24 – 6
5TL–F4727–00	24 – 8
3S0–F4730–00	24 – 1
3S0–F473R–00	24 – 9
3S0–F473T–00	24 – 11
5BP–F4741–00	24 – 5
5LM–F4741–10	28 – 38
3S0–F4742–00	24 – 24
5LM–F4747–00	24 – 3
1S7–F4768–00	24 – 22
3S0–F4773–00	24 – 23
1S7–F4780–00	24 – 16
3S0–F478E–00	24 – 21
5TL–F4799–10	24 – 19
23T–F5104–00	25 – 22
3AY–F5111–01–33	25 – 1
4ST–F5116–01	25 – 2
3P9–F5121–00–33	25 – 6
5ER–F5135–00	25 – 11
3P9–F5137–00	25 – 14
5ER–F5138–00	25 – 13
3P9–F5149–00	25 – 15
3P9–F5155–00	25 – 17
3AY–F5181–01	25 – 28
1S7–F5304–00	26 – 24
1S7–F530K–00	26 – 8
3P9–F530K–00	25 – 8
1S7–F5311–00–33	26 – 1
1S7–F5321–00–33	26 – 7
4ST–F533A–00	25 – 21
5MX–F533A–00	26 – 12
3P9–F5351–00	25 – 20
3Y6–F5351–00	26 – 13
2P2–F5355–00	26 – 11
1S7–F5364–00	26 – 6
37J–F5366–02	26 – 16
3S0–F5371–00	26 – 38
5LM–F5381–00	26 – 29
5TP–F5383–00	26 – 32
5LM–F5389–00	26 – 34
5LM–F5412–00	26 – 21
3S0–F5435–00	26 – 20
3AY–F6113–00	27 – 4
5LM–F6113–00	27 – 7
	33 – 7
3P9–F6143–00–P0	27 – 5
3P9–F6143–00–P1	27 – 5
3S0–F6145–00	27 – 8
3S0–F6210–00	27 – 1
3S0–F6240–00	27 – 11
3S0–F6241–00	27 – 12
5TP–F6280–00	27 – 13
5TP–F6290–00	27 – 14
3S0–F6311–00	27 – 15

PART NO.	REF. NO.
3S0–F6331–00	27 – 23
3P9–F6341–00	27 – 18
3P9–F6342–00	27 – 19
4ST–F6393–00	27 – 16
5TP–F7111–00	28 – 1
3S0–F7112–00	28 – 2
5LM–F7211–00	28 – 5
3S0–F7231–00	28 – 7
5TP–F7311–00	28 – 13
5TP–F7411–00	28 – 17
5LM–F7413–00	28 – 19
5TP–F7424–00	8 – 11
	28 – 34
3S0–F7430–00	28 – 20
5TP–F7433–00	28 – 22
3S0–F7440–00	28 – 27
5TP–F7444–00	28 – 29
5LM–F7445–00	28 – 23
	28 – 30
3S0–F7452–00	28 – 21
3S0–F7462–00	28 – 28
3S0–F8100–00	24 – 26
3S0–F8100–10	24 – 26
3S0–F8311–00–P0	29 – 1
3S0–F8311–00–P1	29 – 1
3S0–F8312–00–P0	29 – 2
3S0–F8312–00–P1	29 – 2
3P9–F831Y–00	29 – 24
3P9–F831Y–10	29 – 24
3S0–F8321–00	29 – 3
3S0–F8322–00	29 – 4
3P9–F8368–00	29 – 23
3P9–F8368–10	29 – 23
5LM–F8371–00	18 – 9
	29 – 17
3S0–F8385–00–P0	29 – 9
3S0–F8385–00–P1	29 – 9
3P9–F8391–00	29 – 25
3P9–F8391–10	29 – 25
3P9–F8392–00	29 – 26
3P9–F8392–10	29 – 26
3S0–F8395–00–P0	29 – 13
3S0–F8395–00–P1	29 – 13
3S0–F842M–00	29 – 18
3S0–F842N–00	29 – 21
5TP–H1410–00	30 – 2
5TP–H1450–00	30 – 1
5TP–H1800–10	31 – 1

PART NO.	REF. NO.
5TP–H1801–00	31 – 2
5TP–H182L–00	31 – 3
3S0–H183G–10	31 – 5
5TP–H1940–00	37 – 8
2P2–H1960–00	37 – 6
3AY–H2110–00	36 – 4
3AY–H2110–10	36 – 4
3S0–H2115–00	36 – 7
3S0–H2116–00	36 – 9
5TP–H2150–00	36 – 8
3S0–H2176–00	36 – 10
5TP–H2310–00	36 – 1
5TP–H2370–00	36 – 3
5TP–H2501–20	36 – 13
4ST–H2530–40	36 – 15
3S0–H2540–00	37 – 3
3S0–H2590–00	36 – 16
5TP–H2828–00	31 – 6
3P9–H2921–00	35 – 10
3P9–H2923–00	35 – 15
5HV–H3311–00	34 – 3
5LL–H3311–00	33 – 3
5TF–H3350–00	37 – 9
5TP–H3371–00	37 – 10
3S0–H3509–00	32 – 4
3S0–H3510–00	32 – 1
1S7–H3511–00	32 – 2
3S0–H353F–00	32 – 3
3AY–H3550–00	32 – 9
3P9–H3922–00	35 – 11
3AY–H3936–10	27 – 24
5TL–H3941–00	35 – 2
5TL–H3947–00	35 – 3
3S0–H3973–00	35 – 1
3S0–H3975–00	35 – 8
5TL–H397X–00	35 – 4
4ST–H3980–10	35 – 14
3S0–H4300–00	33 – 1
5HV–H4314–00	33 – 2
3S0–H4374–00	33 – 6
5TP–H454E–01	21 – 21
3S0–H4702–00	34 – 13
3S0–H4710–00	34 – 1
4AC–H4714–00	34 – 2
3S0–H4721–00	34 – 5
3S0–H4723–00	34 – 6
3S0–H4743–00	34 – 4
5YP–H5353–00	33 – 4

PART NO.	REF. NO.
5TF–H5540–00	37 – 1
5BP–H5546–00	37 – 2
3S0–H5752–00	37 – 12
4US–H5753–00	37 – 14
5ER–H5757–00	37 – 13
5TP–WE140–10	2 – 1
90101–06278	25 – 18
	26 – 14
90101–08590	4 – 8
90101–08847	26 – 22
90105–10036	21 – 18
90105–10778	20 – 12
90105–12018	20 – 11
90109–06827	35 – 12
90109–08034	28 – 14
90109–08183	26 – 39
90109–08368	26 – 43
90116–06804	1 – 4
90116–08807	9 – 14
90119–05071	37 – 15
90119–05827	13 – 19
90119–06044	18 – 11
90119–06117	20 – 9
90155–06007	5 – 5
90159–03102	32 – 6
90159–06033	24 – 20
90159–06817	19 – 13
	21 – 14
	29 – 11
	29 – 15
	29 – 19
90167–04021	32 – 7
90170–05302	3 – 10
90170–06184	26 – 36
90175–06013	27 – 21
	28 – 10
90176–08805	1 – 11
90179–08639	26 – 23
90179–12802	13 – 11
90179–14001	13 – 25
90179–25033	21 – 8
90183–05807	18 – 7
	19 – 9
	21 – 16
	24 – 10
	27 – 6
	29 – 10
	29 – 14

PART NO.	REF. NO.
90183–05807	34 – 11
90185–10808	21 – 19
90185–10811	25 – 29
90185–12804	26 – 30
90201–06071	34 – 9
90201–064K6	23 – 4
90201–064L6	25 – 12
90201–06557	8 – 8
	29 – 7
90201–08326	4 – 7
90201–083A8	8 – 13
90201–08609	1 – 10
90201–08612	8 – 10
	27 – 3
90201–086P8	17 – 3
90201–101J1	20 – 13
	25 – 30
90201–10669	8 – 18
90201–12019	13 – 10
90201–12166	14 – 7
90201–12190	20 – 6
90201–122F8	20 – 5
90201–122H1	30 – 6
90201–12688	26 – 31
90201–126A7	16 – 18
90201–127F4	16 – 14
90201–15700	14 – 17
90201–167P7	13 – 5
90201–178D3	16 – 11
90201–178J5	13 – 20
90201–20266	14 – 4
	14 – 11
90201–20269	25 – 16
90206–19027	11 – 5
90240–08145	28 – 24
	28 – 31
90249–12008	27 – 22
	28 – 9
90280–03017	2 – 8
90340–12808	5 – 6
90340–14806	10 – 7
90340–32805	10 – 9
90387–062M9	21 – 15
90387–06681	18 – 3
	21 – 10
90387–06803	6 – 18
90387–06841	29 – 5
90387–06844	10 – 15

PART NO.	REF. NO.
90387–06846	29 – 20
90387–06889	24 – 14
90387–06899	19 – 6
	19 – 11
90387–10277	25 – 27
90387–10810	8 – 12
	28 – 35
90387–127Y0	26 – 17
90387–12841	26 – 33
90387–1503D	14 – 16
90387–16803	13 – 1
90387–17004	13 – 23
90430–06014	4 – 15
90445–08816	36 – 5
90445–08819	36 – 6
90460–43053	6 – 17
90462–10801	9 – 12
90464–65801	27 – 25
90465–10833	9 – 11
90467–07029	7 – 30
90467–08801	8 – 29
90467–09006	23 – 9
90467–10008	23 – 8
90467–12800	6 – 16
90467–13800	6 – 21
90467–13808	9 – 5
90467–13809	8 – 32
	8 – 36
90467–15012	8 – 31
90467–16800	8 – 25
90468–23194	11 – 3
90480–01559	18 – 12
90480–12808	19 – 5
	19 – 10
90480–13005	34 – 8
90480–13018	29 – 6
90480–13568	10 – 14
90480–14806	24 – 13
90480–18895	34 – 12
90501–02639	12 – 8
90501–04800	13 – 9
90501–050F1	13 – 22
90501–06022	15 – 6
90501–10073	27 – 20
90501–10245	28 – 8
90501–125E9	16 – 17
90501–203G2	13 – 18
90506–12001	25 – 9

PART NO.	REF. NO.
90506–12001	26 – 9
90506–15001	25 – 10
	26 – 10
90506–20810	28 – 6
90506–20829	28 – 16
90506–35806	28 – 4
90508–26016	11 – 8
90508–29007	16 – 7
90560–10292	25 – 3
90560–12145	26 – 2
90560–17384	13 – 12
91317–06012	4 – 5
	12 – 9
	36 – 14
91317–06014	30 – 4
91317–06016	4 – 12
	8 – 23
91317–06018	4 – 16
91317–06025	6 – 5
	6 – 6
	30 – 3
	35 – 16
91401–20012	26 – 42
	28 – 11
91401–25015	28 – 25
	28 – 32
91401–30030	28 – 3
92907–04100	7 – 11
	7 – 24
92907–06600	6 – 20
	18 – 5
	28 – 12
	36 – 12
92907–08200	8 – 38
	26 – 40
92907–10200	8 – 16
9290L–06200	35 – 6
92B17–06025	15 – 3
93101–10843	10 – 24
93102–12891	16 – 6
93102–15890	11 – 13
93102–20892	14 – 21
93105–47807	25 – 7
93106–20816	25 – 4
93106–26815	26 – 18
93210–068F7	16 – 22
93210–10804	4 – 2
93210–108H4	32 – 11

PART NO.	REF. NO.
93210–148F8	10 – 8
93210–198F9	10 – 23
93210–228G1	37 – 4
93210–258G2	6 – 3
	6 – 4
93210–328G3	10 – 10
93210–418G7	26 – 5
93210–448G4	1 – 9
93210–568G8	1 – 17
93210–638G6	1 – 6
93306–001Y7	14 – 9
93306–002X2	4 – 3
93306–004XC	26 – 19
93306–202YW	14 – 19
93306–203YR	14 – 8
93306–204YC	14 – 20
93306–205YG	2 – 7
93306–300X9	25 – 5
93306–301YP	26 – 4
93306–301YR	26 – 3
93310–526X0	2 – 3
93340–210Y0	13 – 28
93340–212Y2	16 – 15
93410–20038	14 – 5
	14 – 12
	14 – 23
93440–10153	1 – 3
93450–14088	2 – 11
93604–10011	16 – 16
93604–12831	15 – 4
93606–10800	13 – 8
93608–43157	12 – 2
93608–50149	16 – 8
93610–10174	12 – 7
93822–15069	14 – 22
94107–17803	25 – 23
94108–17803	26 – 25
94222–17804	25 – 24
94227–17803	26 – 26
94322–17858	25 – 25
	26 – 27
94414–17849	25 – 26
	26 – 28
94568–A7086	4 – 9
94700–00868	1 – 12
95027–06014	37 – 7
95027–06016	21 – 9
95027–06025	24 – 15
95027–06090	1 – 15
9502L–06040	9 – 10
	10 – 4
	10 – 20
9502L–06050	10 – 5
	10 – 21
9502L–06060	9 – 9
9502L–06080	9 – 8
	10 – 6
95304–08700	26 – 41
95307–06600	25 – 19
	26 – 15
	26 – 35
95307–08700	28 – 15
95604–12200	20 – 7
95607–06100	35 – 13
95607–08200	17 – 4
95707–06500	8 – 20
	16 – 23
	24 – 7
95707–08500	8 – 14
95707–10500	8 – 17
95707–12500	30 – 5
95807–06010	17 – 8
	33 – 5
	37 – 11
95807–06012	8 – 27
	34 – 14
95807–06014	23 – 11
95807–06020	24 – 25
95807–06025	10 – 13
95807–08040	8 – 9
95817–08020	28 – 26
	28 – 33
95817–08120	17 – 2
95827–06016	23 – 3
95827–08016	8 – 37
	9 – 16
	28 – 18
	28 – 37
95827–10045	8 – 15
97007–06016	36 – 2
97007–06020	29 – 8
97007–08016	27 – 2
97017–06025	11 – 12
97027–06020	16 – 25
	18 – 4
97707–50012	21 – 12
97707–50012	27 – 10
	29 – 12
	29 – 16
97707–50014	18 – 8
	19 – 2
	21 – 22
	34 – 10
97707–50016	8 – 34
	24 – 12
	27 – 9
	29 – 22
	32 – 8
97707–50020	19 – 4
	19 – 8
9770L–40620	34 – 7
9770M–50030	6 – 14
98507–04012	7 – 10
98507–04014	7 – 23
98507–05010	37 – 5
98507–05012	27 – 17
98507–06010	36 – 11
98507–06012	24 – 17
98507–06016	1 – 7
98507–06020	6 – 19
9850L–06008	35 – 5
9850M–05025	35 – 7
	35 – 9
98980–06012	8 – 3
	8 – 6
99001–05600	5 – 3
99009–10400	15 – 11
99009–15400	14 – 18
99009–17400	16 – 12
99009–19400	11 – 7
99231–00120	29 – 27
99530–10114	1 – 14
	9 – 7
	9 – 13
	10 – 3
	10 – 19
9X568–62097	26 – 37